


REMOVAL AND INSTALLATION (Continued)

(Continued) REMOVAL AND INSTALLATION (Continued)

Disassembled View

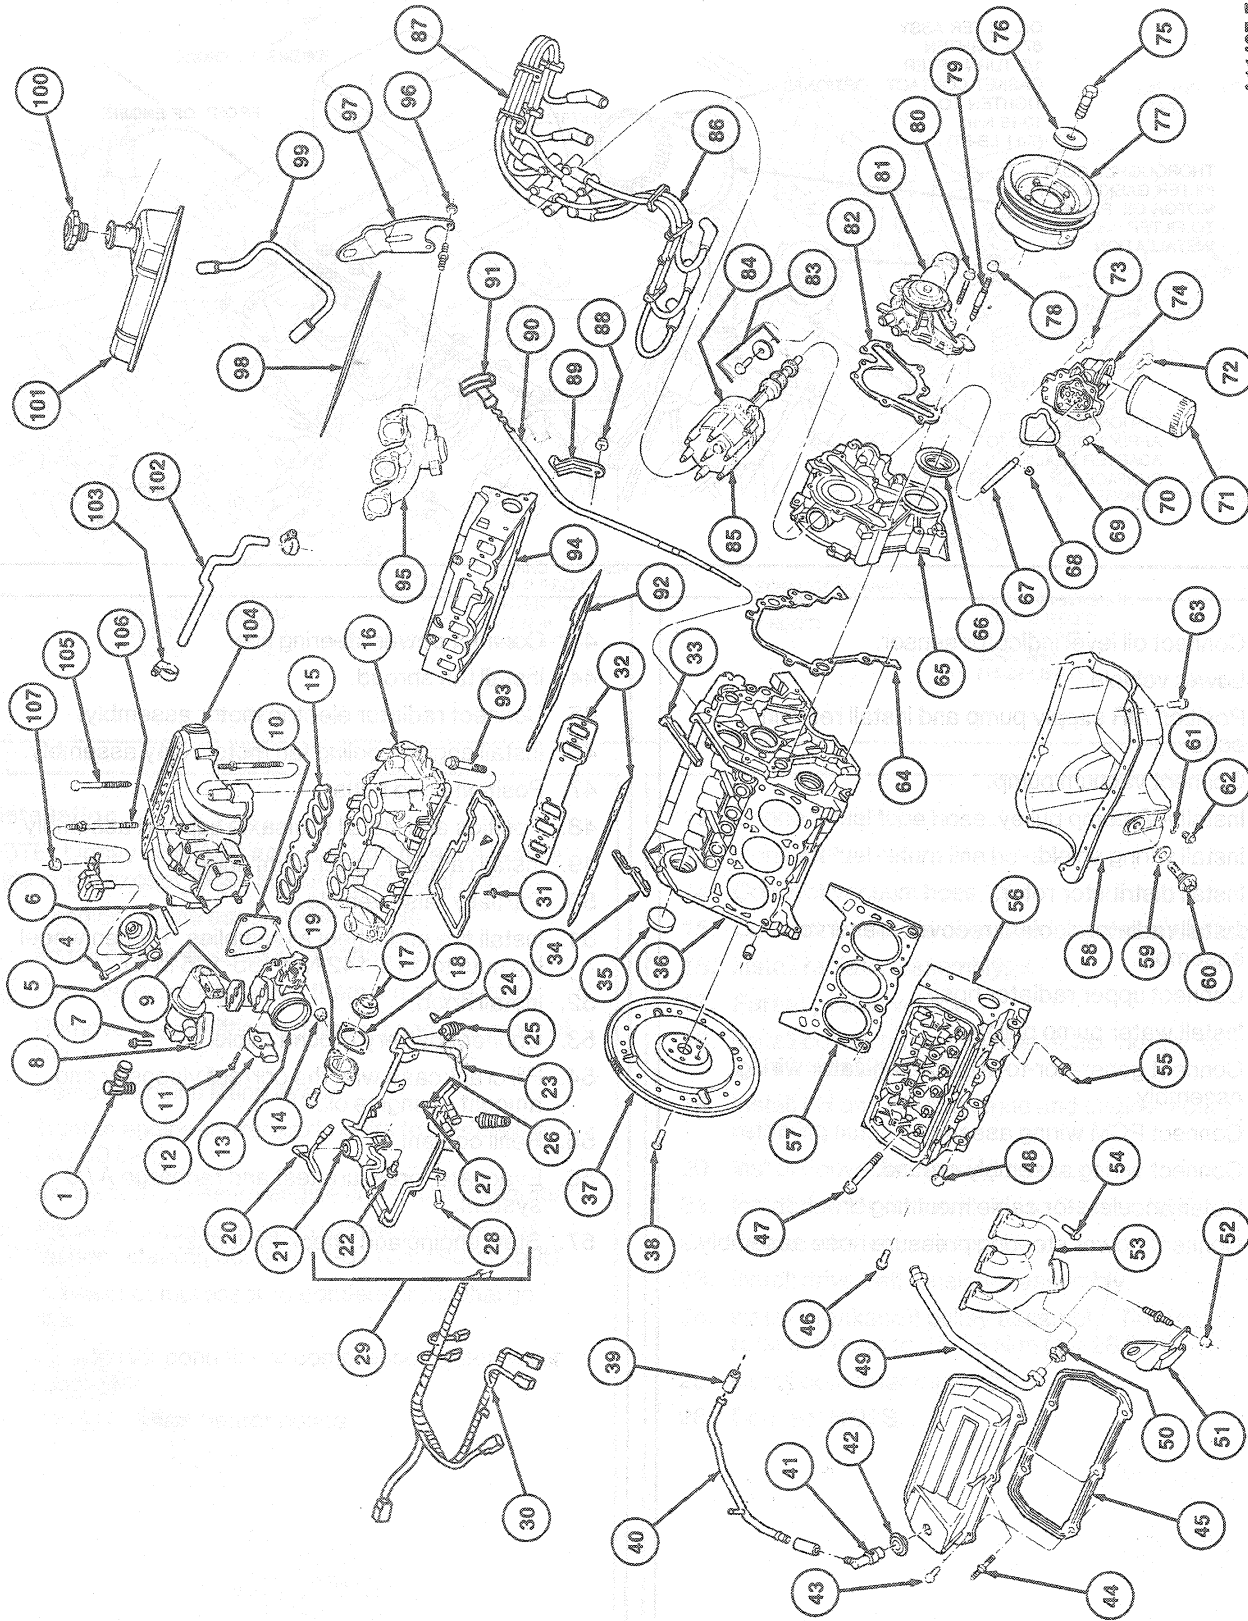

A11467-F