 
 
 
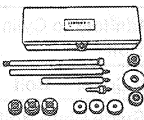
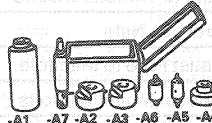

 
 
 
 
 

 
 
 

 


SPECIAL SERVICE TOOLS

Tool Number / Description	Illustration
T50T-100-A Impact Slide Hammer	 T50T-100-A
T58P-6316-D Crankshaft Damper Remover	 T58P-6316-D
T59L-100-B Impact Slide Hammer	 T59L-100-B
T65L-6250-A Camshaft Bearing Set	 T65L-6250-A
T68P-6135-A Piston Pin Remover and Replacer	 -A1 -A7 -A2 -A3 -A6 -A5 -A4 T68P-6135-A
T70P-6B070-A Front Cover Seal Installer	 T70P-6B070-A
T74P-6375-A Flywheel Locking Tool	 T74P-6375-A
T74P-6666-A Spark Plug Wire Remover	 T74P-6666-A
T77L-9533-B Jet Plug Remover	 T77L-9533-B
T81P-6254-A Belt Tension Adaptor	 T81P-6254-A

(Continued)

SPECIAL SERVICE TOOLS

Tool Number / Description	Illustration
T81P-6513-A Valve Spring Compressor	 T81P-6513-A
T81P-9425-A Intake Manifold Torque Adapter	 T81P-9425-A
T82L-6316-A Damper / Front Cover Seal Installer	 T82L-6316-A
T82L-6316-B Vibration Damper Remover Adapter	 T82L-6316-B
T82L-6500-A Tappet Collapser	 T82L-6500-A
T82L-6701-A Rear Main Seal Installer	 T82L-6701-A
T83P-19623-C Spring Lock Coupling Tool	 T83P-19623-C

Tool Number	Description
D81L-600-A	Lb-In Torque Wrench
D81L-600-B	Lb-Ft Torque Wrench
D81L-4201-A	Feeler Gauge
D88L-6000-A	Engine Support Bar
D81L-6001-D	Engine Lifting Eyes
TOOL-6331-E	Main Bearing Insert Tool
TOOL-6500-E	Hydraulic Leakdown Tester
TOOL-6513-DD	Valve / Clutch Spring Tester