



DIAGNOSIS AND TESTING (Continued)

- 3. Stop cranking engine, and reduce resistance of carbon pile until voltmeter indicates same reading as that obtained while starter cranked the engine. The ammeter will indicate starter current draw under load. Check this with value listed in Specifications.

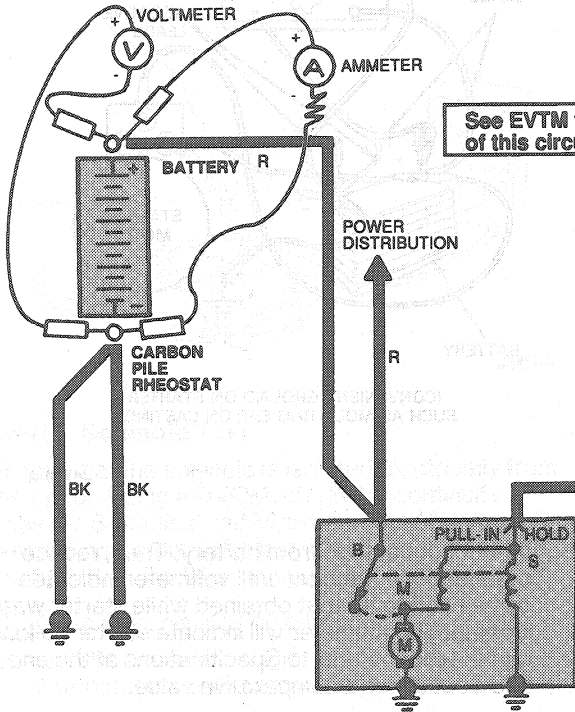

See EVTM for more details of this circuit

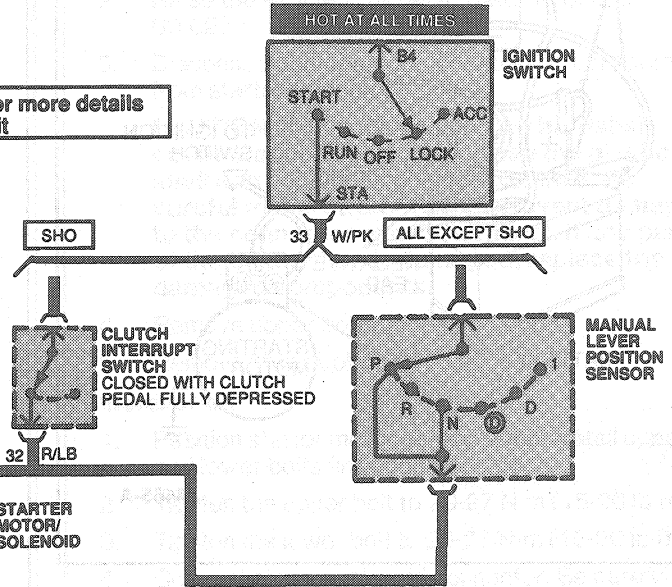

J4465-A