


REMOVAL AND INSTALLATION (Continued)

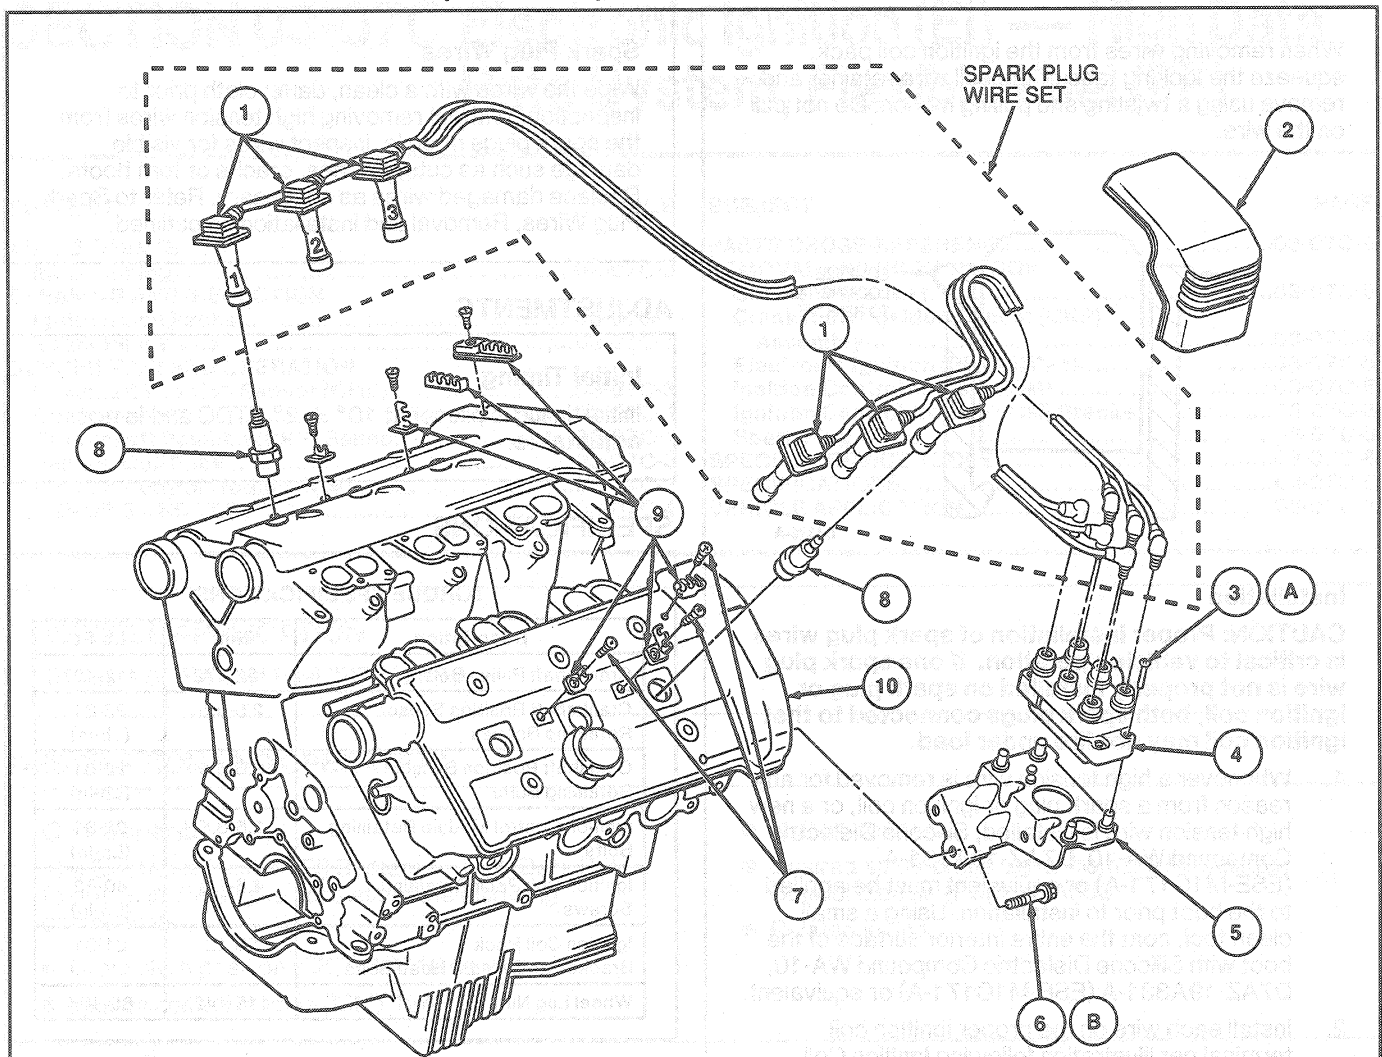

B4382-B

Item	Part Number	Description
1	12259	Spark Plug Wire Assemblies
2	—	Coil Pack Cover
3A	—	Screw and Washer (4 Req'd)
4	12029	Ignition Coil Pack
5	—	Coil Mounting Bracket
6B	—	Bolt (2 Req'd)

(Continued)

Item	Part Number	Description
7	—	Screw (3 Req'd Each Side)
8	12405	Spark Plug
9	—	Wire Clamp
10	6007	Engine Assy
A	—	Tighten to 4.5-7 N·m (40-62 Lb·In)
B	—	Tighten to 28-42 N·m (21-31 Lb·Ft)

Spark Plug Wires**Removal**

When removing spark plug wires from spark plug, grasp and twist the boot back and forth on the plug insulator to free the boot. Use a twisting and pulling motion to pull the boot from the plug. Do not pull on the wire directly, as it may become separated from the connector inside the boot.