


REMOVAL AND INSTALLATION (Continued)


4. Connect wire to spark plug.

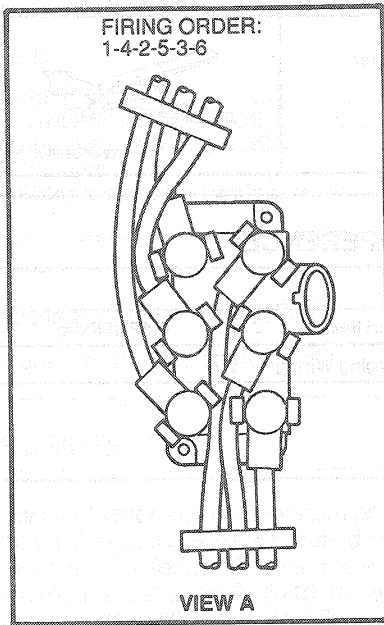

NOTE: INSTALLATION ORDER RH IS

4 5 6


IGNITION WIRE AND BRACKET ASSY RH 12280

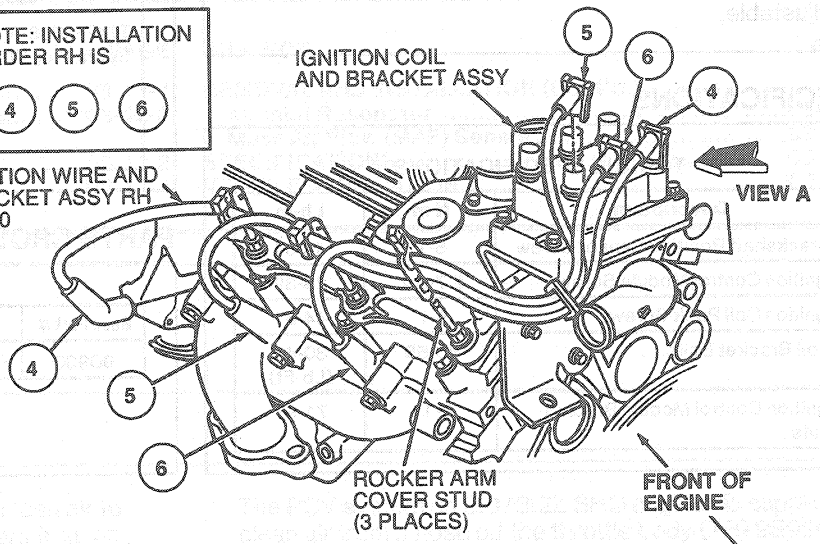

NOTE: ALL SPARK PLUG BOOTS TO BE POSITIONED VERTICALLY

NOTE: WIRE SEPARATORS TO BE FULLY SEATED IN ROCKER ARM COVER STUDS.

NOTE: ASSURE RETAINER CLIP IS FULLY ENGAGED ON COIL TOWER

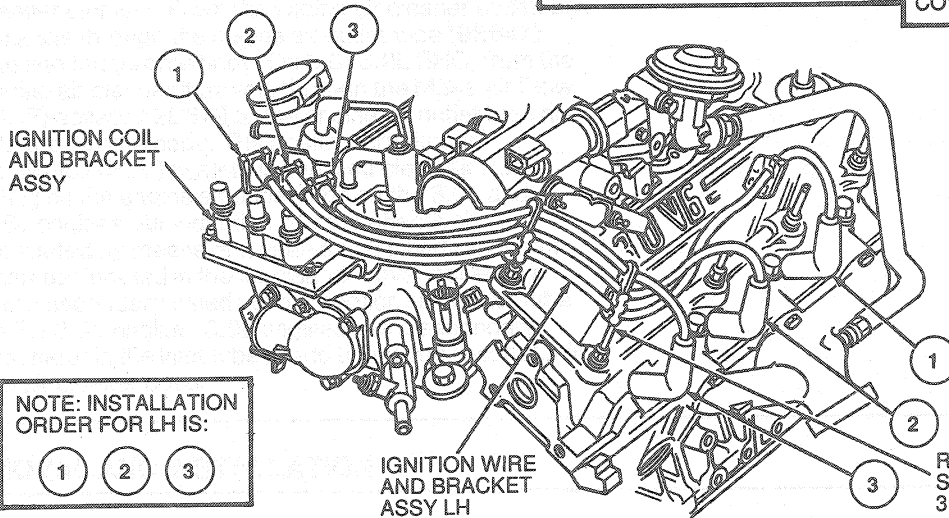

NOTE: INSTALLATION ORDER FOR LH IS:

1 2 3

IGNITION WIRE AND BRACKET ASSY LH

ROCKER ARM COVER STUD 3 PLACES

B4914-A

CLEANING AND INSPECTION

Ignition Coil Packs

Wipe the coil towers with a clean cloth dampened with soap and water. Remove any soap film and dry with compressed air. Inspect for cracks, carbon tracking and dirt.

Spark Plug Wires

Wipe the wires with a clean, damp cloth prior to inspection. Without removing the high-tension wires from the spark plugs or coils, inspect the wires for visible damage such as burns, cuts, pinches, cracks or torn boots. If necessary, replace the damaged spark plug wires as outlined.