

**ADJUSTMENTS**

**Initial Timing**

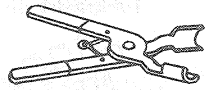
Initial timing is  $10 \pm 2$  degrees BTDC and is NOT adjustable.

**SPECIFICATIONS**

**TORQUE SPECIFICATIONS**

| Description                          | N·m     | Lb·In            |
|--------------------------------------|---------|------------------|
| Crankshaft Position Sensor Screw     | 5-7     | 44-61            |
| Ignition Control Module Screws       | 2.7-3.7 | 24-32            |
| Ignition Coil Pack Screw             | 5-7     | 44-61            |
| Coil Bracket Bolts                   | 40-55   | 30-40<br>(Lb-Ft) |
| Ignition Control Module Bracket Nuts | 8-11    | 71-97            |

**SPECIAL SERVICE TOOLS**

| Tool Number / Description              | Illustration  |
|--|---|
| T74P-6666-A<br>Spark Plug Wire Remover |  |

**PARTS CROSS-REFERENCE**

| Base Part # | Part Name            | Old Part Name |
|-------------|----------------------|---------------|
| 9D930       | Fuel Charging Wiring |               |

