



REMOVAL AND INSTALLATION (Continued)

5. Remove and discard nuts attaching shock absorber to lower suspension arm.

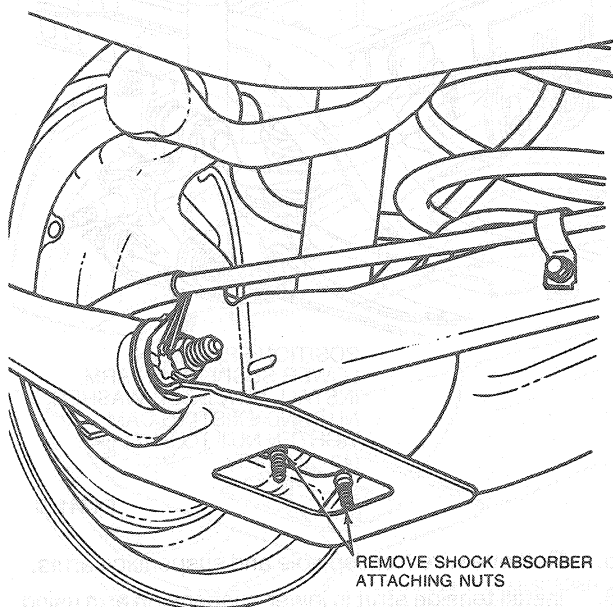

F4336-B


6. Remove parking brake cable and clip from lower suspension arm.
 7. On vehicles equipped with rear disc brakes, remove ABS cable from clips on lower suspension arm.
 8. Remove and discard bolt and nut attaching tension strut to lower suspension arm.
 9. Wire spindle and upper suspension arms to body to prevent them from dropping down.

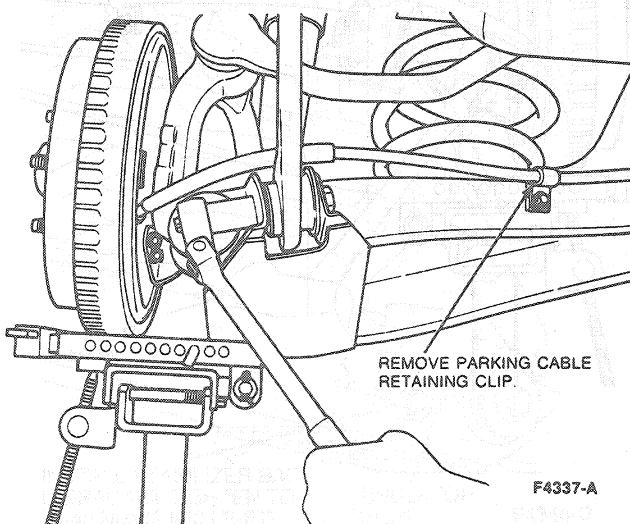

F4337-A


10. Remove nut, bolt, washer and adjusting cam retaining lower suspension arm to spindle. Discard nut, bolt and washer.

11. Slowly lower suspension arm with floor jack until spring can be removed.

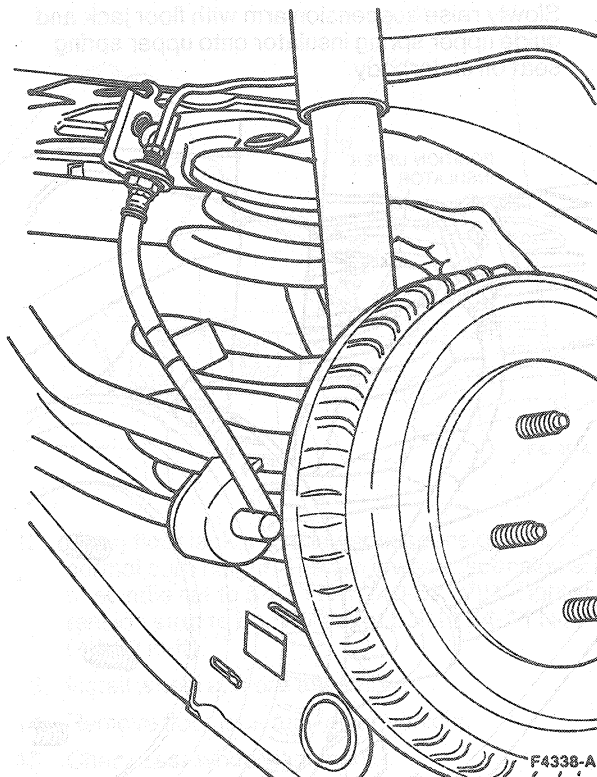

Installation

1. Position lower insulator on lower suspension arm and press insulator downward into place. Verify insulator is properly seated.

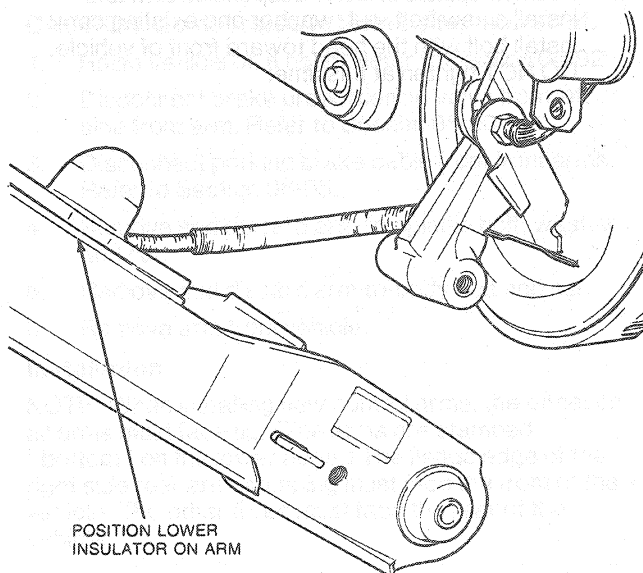

F4339-A