

REMOVAL AND INSTALLATION (Continued)

6. Install wheel and tire assembly.
7. Lower vehicle.


Anti-Lock Sensor Ring

Tools Required:


- Pinion Bearing Cone Remover T71P-4621-B
- Anti-Lock Sensor Ring Installer T88P-20202-B
- Ring Replacer Tool T89P-5493-B

Removal

1. Place hub assembly on press, using Pinion Bearing Cone Remover T71P-4621-B. Position tool between sensor ring and hub. Position Ring Replacer tool T89P-5493-B on the hub.

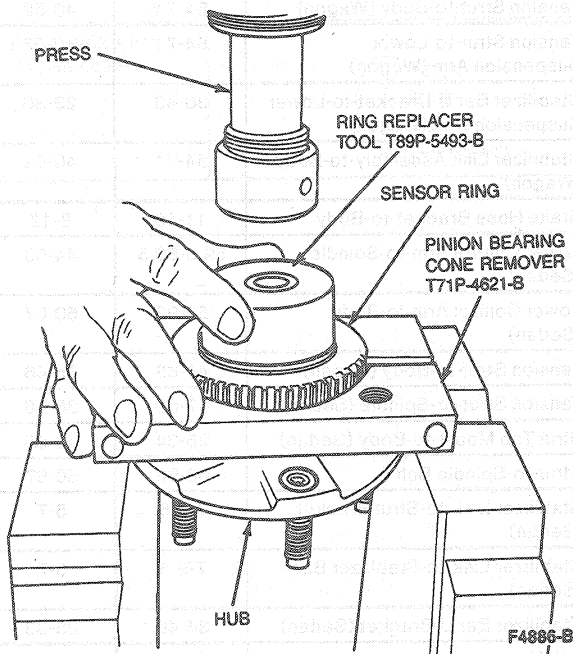

2. Press anti-lock sensor ring off of hub assembly.

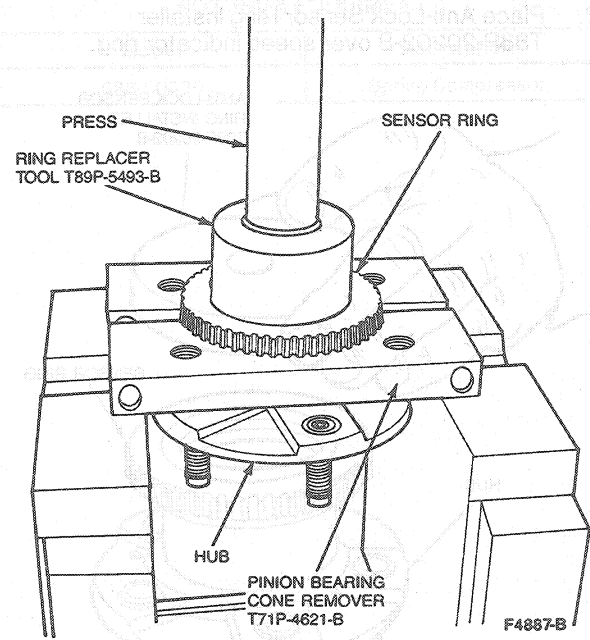

Installation

1. Place anti-lock sensor ring on hub assembly.

