


DESCRIPTION (Continued)

DESCRIPTION (Continued)

3.2L SHO Automatic

HALFSHAFTS — DISASSEMBLED VIEW

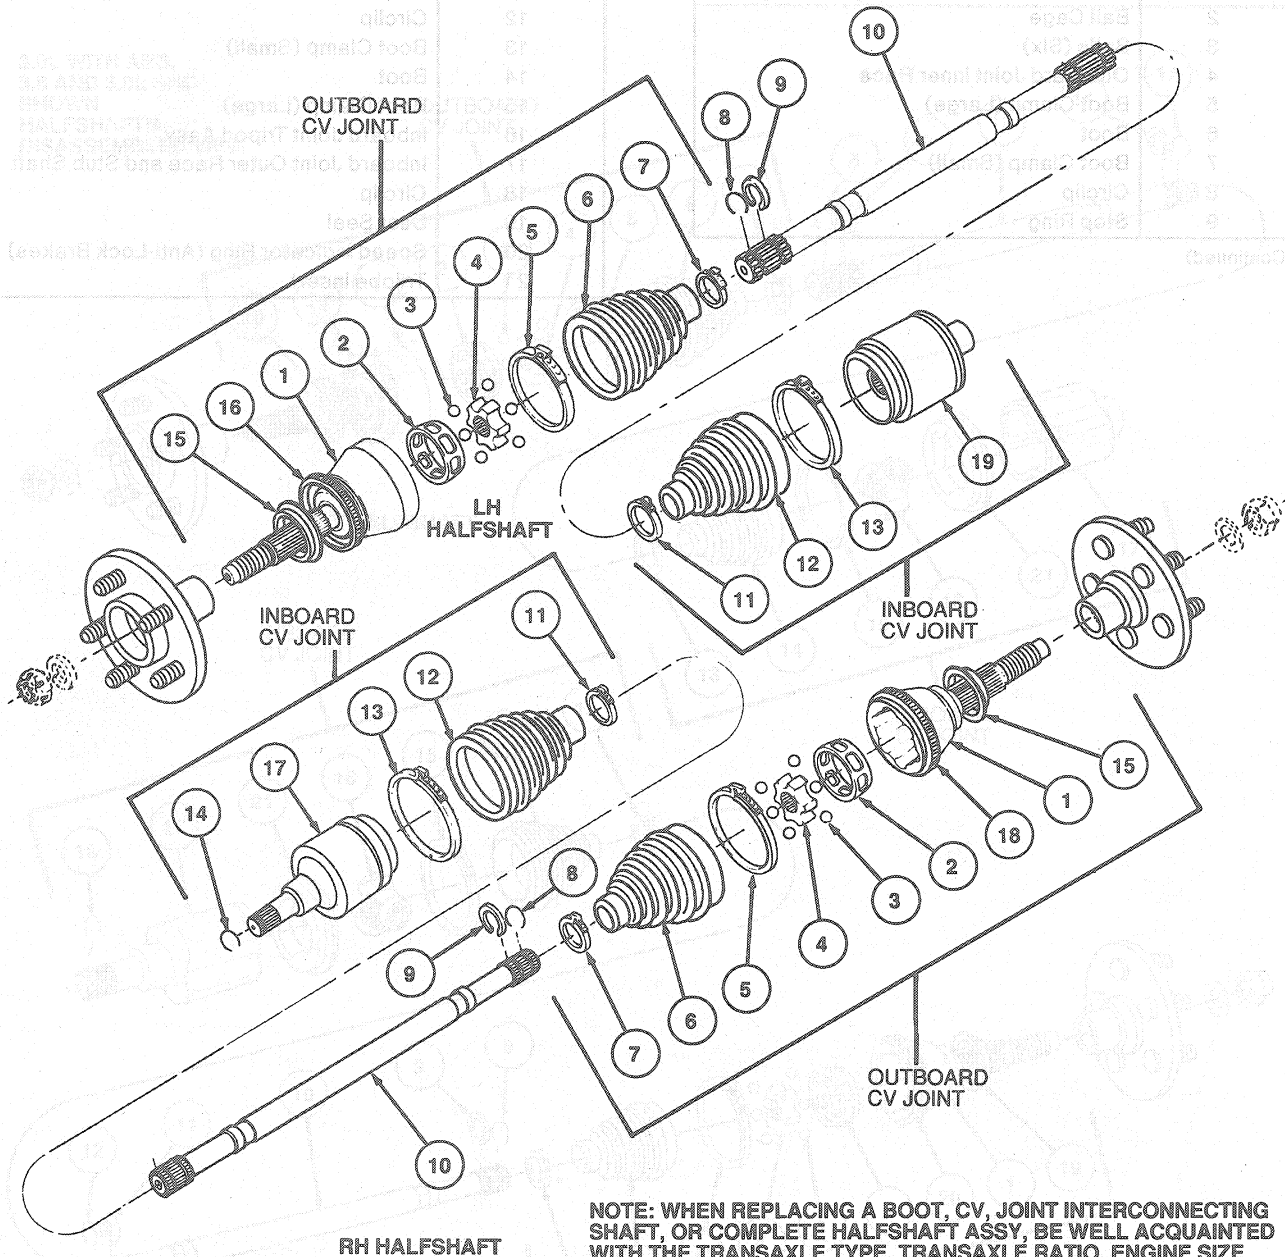

NOTE: WHEN REPLACING A BOOT, CV, JOINT INTERCONNECTING SHAFT, OR COMPLETE HALFSHAFT ASSY, BE WELL ACQUAINTED WITH THE TRANSAXLE TYPE, TRANSAXLE RATIO, ENGINE SIZE AND SPECIFY RH OR LH SIDE INBOARD OR OUTBOARD END.

E6708-F

Item	Part Number	Description
1	3B413	Outboard Joint Outer Race and Stub Shaft
2	3B413	Ball Cage
3	3B413	Balls (Six)
4	3B413	Outboard Joint Inner Race

(Continued)

Item	Part Number	Description
5	3B478	Boot Clamp (Large)
6	3A331	Boot
7	3B478	Boot Clamp (Small)
8	N803655-S	Circlip
9	N803657-S	Stop Ring

(Continued)