


REMOVAL AND INSTALLATION (Continued)

8. Support end of shaft by suspending from a convenient underbody component with a length of wire.


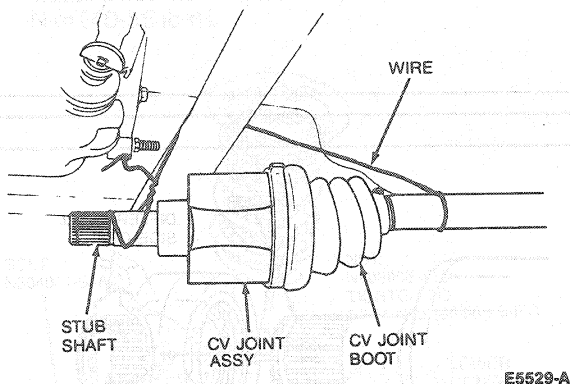


**CAUTION:** Never use a hammer to separate the outboard CV joint stub shaft from the hub. Damage to the CV joint threads and internal components may result.

**NOTE:** The RH link shaft and halfshaft assembly are removed as a complete unit. Refer to Disassembly and Assembly to separate link shaft and halfshaft.

9. Separate the outboard CV joint from the hub using Front Hub Remover / Replacer T81P-1104-C, Metric Hub Remover Adapter T83P-1104-BH, T86P-1104-A1 and Front Hub Installer T81P-1104-A.

MAKE SURE THE HUB REMOVER ADAPTER IS FULLY THREADED ONTO THE HUB STUD AND IS POSITIONED OPPOSITE THE TWO STUD ADAPTER

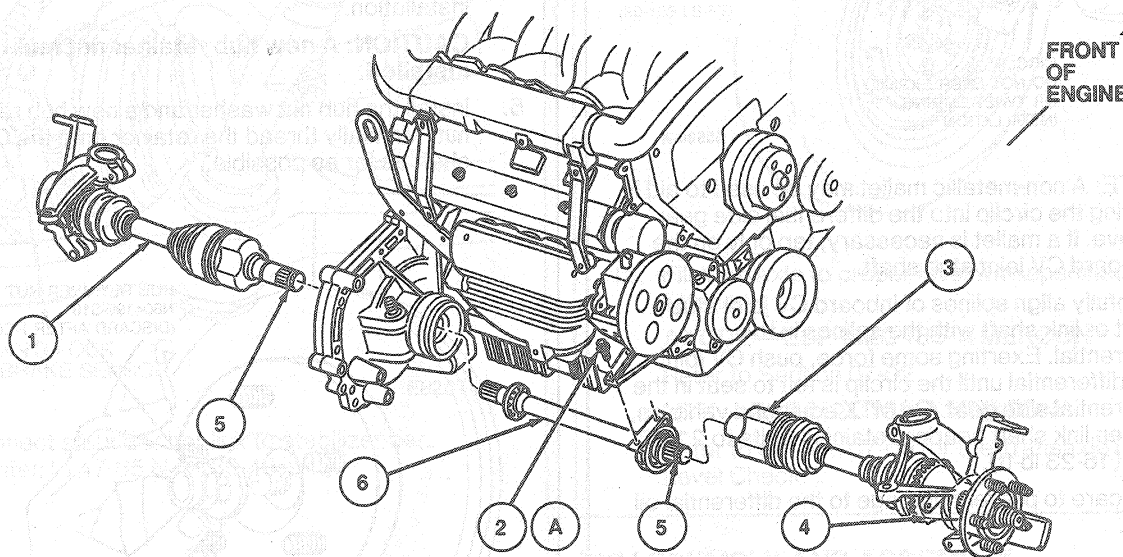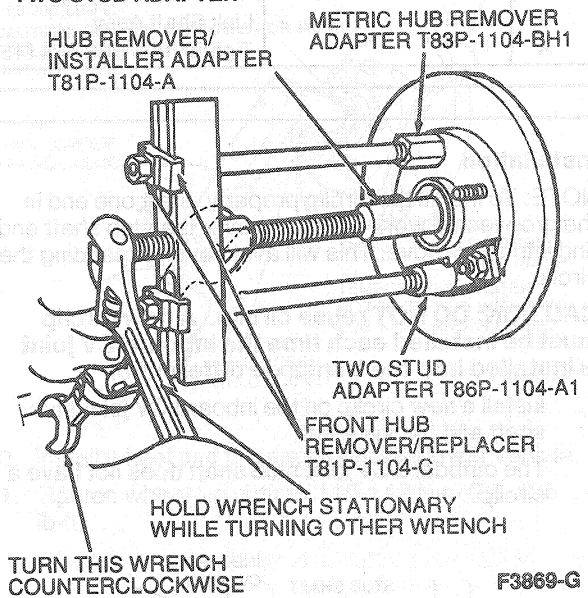

E8285-A

Item	Part Number	Description
1	3B437	LH Halfshaft Assy
2A	N605904-S100	Bolt (2 Req'd)
3	—	RH Inboard CV Joint

(Continued)