

REMOVAL AND INSTALLATION (Continued)

REMOVAL AND INSTALLATION

Item	Part Number	Description
17	2218	Shoe and Lining Assy
18	2N183	Locating Washer
19	2B595	Parking Brake Lever Shaft Seal
20	2L642	Parking Brake Lever Return Spring

(Continued)


Item	Part Number	Description
21	2A637 (RH) 2A638 (LH)	Parking Brake Lever
22	2A795	Parking Brake Spring Retainer Bolt
A		Tighten to 31-35 N-m (23-26 lb-ft)

TH5166E

After any service, pump the brake pedal to obtain a firm brake pedal before moving the vehicle. Riding the brake pedal (common with LH-foot application) must be avoided when driving the vehicle.

Removal

1. Raise vehicle on hoist. Refer to Section 00-02.
2. Remove wheel and tire assembly. Refer to Section 04-04.
3. Remove brake flex hose from caliper assembly.

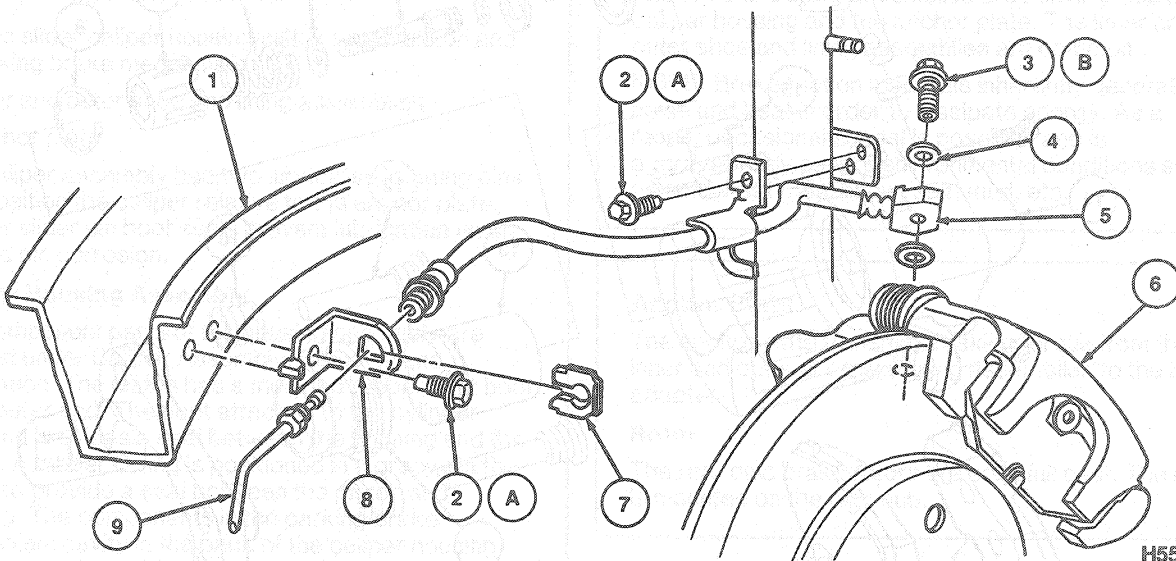

H5524-C

Item	Part Number	Description
1	—	Side Rail
2A	W611635-S150	Screw
3B	N801052-S100	Screw
4	388949-S	Washer (2 Req'd)
5	2A442 RH 2A478 LH	Hose Assy
6	2K328	Caliper Assy

(Continued)

Item	Part Number	Description
7	386493-S150	Clip (2 Req'd)
8	2073	Bracket (2 Req'd)
9	2C287	Brake Line Assy
A		Tighten to 11-16 N-m (8-11 Lb-Ft)
B		Tighten to 40-60 N-m (30-45 Lb-Ft)

TH5524C