

DIAGNOSIS AND TESTING (Continued)

ON-BOARD DIAGNOSTIC TROUBLE CODE INDEX

DIAGNOSTIC TROUBLE (COMPONENT)	PINPOINT TEST STEP
11 (ABS Module)	AA 1
22 (LH Front Inlet Valve)	BB 1
23 (LH Front Outlet Valve)	BB 4
24 (RH Front Inlet Valve)	BB 6
25 (RH Front Outlet Valve)	BB 8
26 (RH Rear Inlet Valve)	BB 10
27 (RH Rear Outlet Valve)	BB 12
28 (LH Rear Inlet Valve)	BB 14
29 (LH Rear Outlet Valve)	BB 16
31 (LH Front Sensor)	CC 1
32 (RH Front Sensor)	CC 8
33 (RH Rear Sensor)	CC 15
34 (LH Rear Sensor)	CC 22
35 (LH Front Sensor)	CC 1
36 (RH Front Sensor)	CC 8
37 (RH Rear Sensor)	CC 15
38 (LH Rear Sensor)	CC 22
41 (LH Front Sensor)	CC 1
42 (RH Front Sensor)	CC 8
43 (RH Rear Sensor)	CC 15
44 (LH Rear Sensor)	CC 22

(Continued)

ON-BOARD DIAGNOSTIC TROUBLE CODE INDEX (Cont'd)

DIAGNOSTIC TROUBLE (COMPONENT)	PINPOINT TEST STEP
51 (LH Front Outlet Valve)	DD 1
52 (RH Front Outlet Valve)	DD 5
53 (RH Rear Outlet Valve)	DD 9
54 (LH Rear Outlet Valve)	DD 13
55 (LH Front Sensor)	CC 1
56 (RH Front Sensor)	CC 8
57 (RH Rear Sensor)	CC 15
58 (LH Rear Sensor)	CC 22
61 (FLS Circuits)	EE 1
62 (Travel Switch)	EE 1
63 (Pump Motor Speed Sensor)	EE 7
64 (Pump Motor Pressure)	EE 29
67 (Pump Motor Relay)	E 1
71 (LH Front Sensor)	CC 1
72 (RH Front Sensor)	CC 8
73 (RH Rear Sensor)	CC 15
74 (LH Rear Sensor)	CC 22
75 (LH Front Sensor)	CC 1
76 (RH Front Sensor)	CC 8
77 (RH Rear Sensor)	CC 15
78 (LH Rear Sensor)	CC 22

TH7910B

PINPOINT TEST AA: ABS MODULE DIAGNOSIS

TEST STEP	RESULT	ACTION TO TAKE
AA 1 DTC 11: ELECTRICAL DISTURBANCE <ul style="list-style-type: none"> Read all DTC's and record. After all DTC's are read and written down, drive vehicle above 40 km/h (25 mph) to clear memory. Read all DTC's again. 	DTC 11 repeated Memory erased or other DTC's present except code 11	REPLACE ABS module. PERFORM test step associated with DTC's. REFER to On-Board Diagnostic Trouble code index, and SERVICE next code.

TH6965B