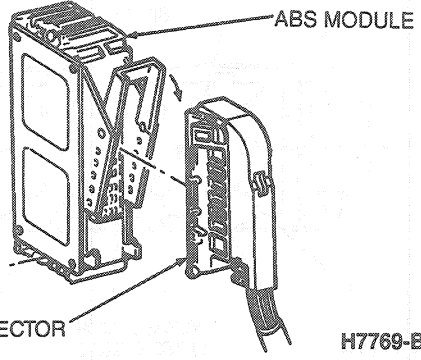
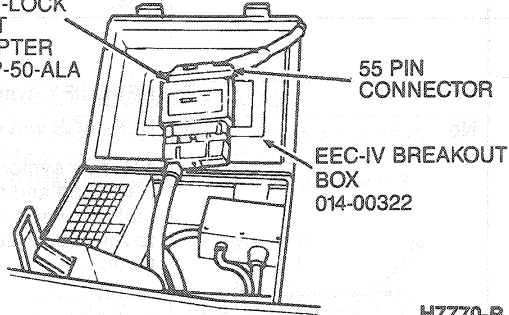
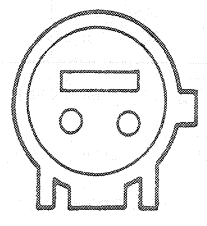


DIAGNOSIS AND TESTING (Continued)

**PINPOINT TEST CC:
WHEEL SENSOR DIAGNOSIS**

	TEST STEP	RESULT	ACTION TO TAKE
CC1	<p>DTC's 31, 35, 41, 55, 71 OR 75: CHECK LH FRONT SENSOR</p>		
	<ul style="list-style-type: none"> ● Turn ignition switch OFF. ● Disconnect 55-pin connector from ABS module.  <p>ABS MODULE 55 PIN CONNECTOR H7769-B</p> <ul style="list-style-type: none"> ● Connect EEC-IV Breakout Box 014-00322 with Anti-Lock Test Adapter T90P-50-ALA or equivalent to the 55-pin connector on wiring harness.  <p>ANTI-LOCK TEST ADAPTER T90P-50-ALA 55 PIN CONNECTOR EEC-IV BREAKOUT BOX 014-00322 H7770-B</p> <ul style="list-style-type: none"> ● Measure resistance between Pins 30 and 48. ● Is resistance between 800 and 1400 ohms? 	<p>Yes</p> <p>No</p>	<p>▶ GO to CC3.</p> <p>▶ GO to CC2.</p>
CC2	<p>CHECK LH FRONT SENSOR RESISTANCE</p>		
	<ul style="list-style-type: none"> ● Disconnect LH front wheel sensor plug. ● Measure resistance of sensor at sensor plug. ● Is resistance between 800 and 1400 ohms?  <p>LH FRONT SENSOR H7773-A</p>	<p>Yes</p> <p>No</p>	<p>▶ SERVICE or REPLACE cable harness Circuit 521 or 522.</p> <p>▶ REPLACE LH front sensor.</p>