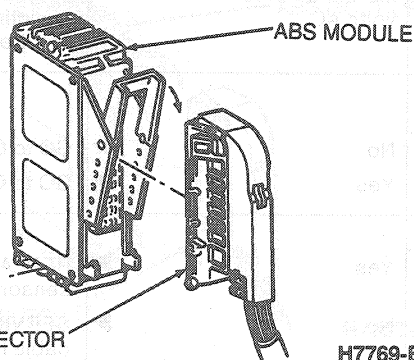
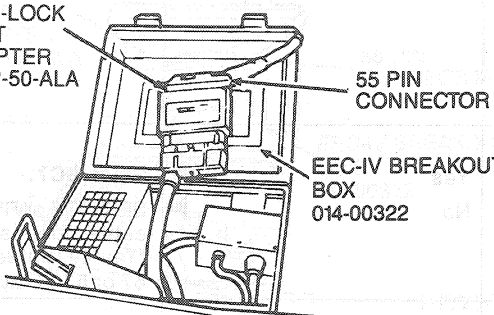
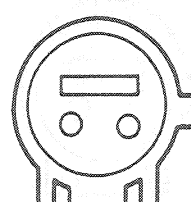


DIAGNOSIS AND TESTING (Continued)

PINPOINT TEST CC:
WHEEL SENSOR DIAGNOSIS (Continued)

TEST STEP	RESULT	ACTION TO TAKE
<p>CC8 DTC'S 32, 36, 42, 56, 72 OR 76: CHECK RH FRONT SENSOR</p> <ul style="list-style-type: none"> ● Turn ignition switch OFF. ● Disconnect 55-pin connector from ABS module.  <ul style="list-style-type: none"> ● Connect EEC-IV breakout box 014-00322 with Anti-Lock Test Adapter T90P-50-ALA or equivalent to the 55-pin connector on wiring harness.  <ul style="list-style-type: none"> ● Measure resistance between Pins 29 and 47. ● Is resistance between 800 and 1400 ohms? 	<p>Yes</p> <p>No</p>	<p>▶ GO to CC10.</p> <p>▶ GO to CC9.</p>
<p>CC9 CHECK RH FRONT SENSOR RESISTANCE</p> <ul style="list-style-type: none"> ● Disconnect RH front sensor plug. ● Measure resistance of sensor at sensor plug. ● Is resistance between 800 and 1400 ohms? 	<p>Yes</p> <p>No</p>	<p>▶ SERVICE or REPLACE cable harness Circuit 514 or 516.</p> <p>▶ REPLACE RH front sensor.</p>