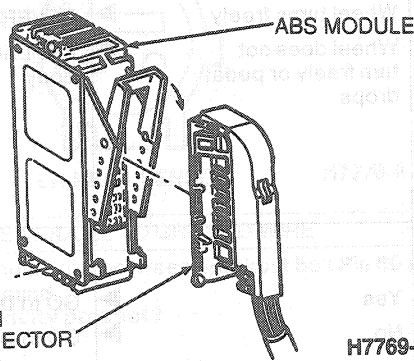
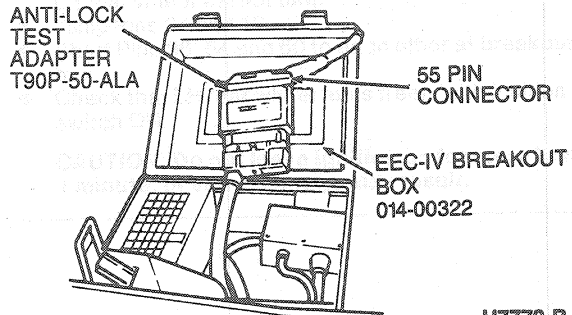
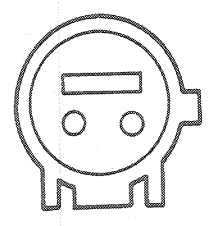


DIAGNOSIS AND TESTING (Continued)

PINPOINT TEST DD:
WHEEL SENSOR DIAGNOSIS (Continued)

TEST STEP	RESULT	ACTION TO TAKE
<p>DD9 DTC 53 AND / OR 73: CHECK RH REAR SENSOR CIRCUIT CONTINUITY</p> <ul style="list-style-type: none"> ● Turn ignition switch OFF. ● Disconnect 55-pin plug from ABS Module. ● Check for continuity between breakout box Pins 60 and 27. ● Is continuity present?  <p>ABS MODULE 55 PIN CONNECTOR H7769-B</p> <ul style="list-style-type: none"> ● Connect EEC-IV breakout box 014-00322 with Anti-Lock Test Adapter T90P-50-ALA or equivalent to the anti-lock 55-pin plug wiring harness.  <p>ANTI-LOCK TEST ADAPTER T90P-50-ALA 55 PIN CONNECTOR EEC-IV BREAKOUT BOX 014-00322 H7770-B</p>	<p>Yes</p> <p>No</p>	<p>▶ GO to DD10.</p> <p>▶ GO to DD11.</p>
<p>DD10 CHECK RH REAR SENSOR CONTINUITY</p> <ul style="list-style-type: none"> ● Disconnect RH rear wheel sensor plug. ● Check for continuity between each sensor plug pin (sensor side) and vehicle ground. ● Is continuity present?  <p>RH REAR SENSOR H7775-A</p>	<p>Yes</p> <p>No</p>	<p>▶ REPLACE RH rear sensor.</p> <p>▶ SERVICE or REPLACE cable harness Circuit 523 or 524. RECONNECT sensor plug.</p>