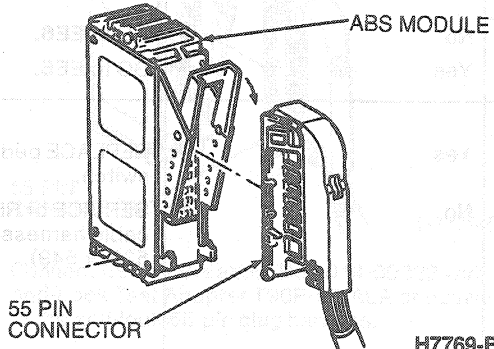
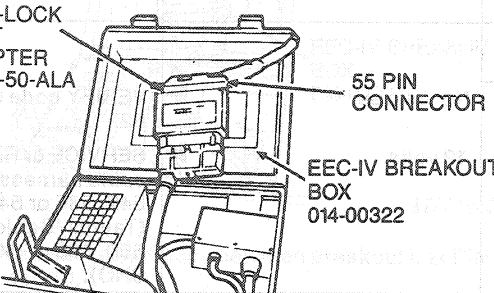


DIAGNOSIS AND TESTING (Continued)

(Continued)

PINPOINT TEST EE:
FLUID LEVEL INDICATOR/PEDAL TRAVEL SWITCH/PRESSURE SWITCH DIAGNOSIS (Continued)

TEST STEP	RESULT	ACTION TO TAKE
<p>EE7 DTC 63: CHECK PUMP MOTOR SPEED SENSOR AND CIRCUIT</p>		
<p>NOTE: The ABS module will check the pump speed sensor and circuitry by running the pump for about 0.5 second each time the ignition is switched on and the vehicle speed reaches 30 km/h (19 mph).</p> <ul style="list-style-type: none"> ● Turn ignition switch OFF. ● Disconnect 55-pin plug from ABS Module. 	<p>Yes No</p>	<p>▶ GO to EE13. ▶ GO to EE8.</p>
 <p>Diagram showing the ABS MODULE and the 55 PIN CONNECTOR. Reference code H7769-B.</p>		
<ul style="list-style-type: none"> ● Connect EEC-IV breakout box 014-00322 with Anti-Lock Test Adapter T90P-50-ALA or equivalent to the anti-lock 55-pin plug harness.  <p>Diagram showing the ANTI-LOCK TEST ADAPTER T90P-50-ALA, the 55 PIN CONNECTOR, and the EEC-IV BREAKOUT BOX 014-00322. Reference code H7770-B.</p>		
<ul style="list-style-type: none"> ● Check resistance between breakout box Pins 31 and 49. ● Is resistance between 5 and 100 ohms? 		