 


DIAGNOSIS AND TESTING (Continued)



ANTI-LOCK BRAKE MODULE  
CONNECTOR HARNESS SIDE H8091-A

Pin Number	Circuit	Circuit Function
1	530 (LG/Y)	Ground
2	498 (PK)	ABS Valve Assembly
3	532 (O/Y)	ABS Power Relay
4	—	Not Used
5	549 (BR/W)	ABS Brake Pedal Travel Switch
6	—	Not Used
7	—	Not Used
8	542 (Y) 550 (Y/LG)	Brake Fluid Level Switch No. 2
9	—	Not Used
10	—	Not Used
11	—	Not Used
12	—	Not Used
13	—	Not Used
14	—	Not Used
15	539 (PK/LB)	Anti-Lock Motor Relay
16	—	Not Used
17	—	Not Used
18	599 (PK/LG) 685 (BK/W)	ABS Valve Assembly
19	530 (LG/Y)	Ground

(Continued)

Pin Number	Circuit	Circuit Function
20	495 (T)	ABS Valve Assembly
21	497 (W)	ABS Valve Assembly
22	—	Not Used
23	201 (T/R)	Test Connector
24	—	Not Used
25	—	Not Used
26	535 (LB/R)	ABS Switch to Level Switch No. 2
27	524 (PK/BK)	Right Rear Sensor-LO
28	519 (LG/BK)	Left Rear Sensor-LO
29	516 (Y/BK)	Right Front Sensor-LO
30	522 (T/BK)	Left Front Sensor-LO
31	462 (P)	Pump Motor Speed Sensor
32	511 (LG)	Stop Lamp Switch
33	532 (O/Y)	ABS Power Relay
34	513 (BR/PK)	ABS Power Relay
35	—	Not Used
36	499 (GY/BK)	ABS Valve Assembly
37	—	Not Used
38	510 (T/R)	ABS Valve Assembly
39	—	Not Used
40	—	Not Used
41	—	Not Used
42	—	Not Used
43	—	Not Used
44	—	Not Used
45	523 (R/PK)	Right Rear Sensor-HI
46	518 (LG/R)	Left Rear Sensor-HI
47	514 (Y/R)	Right Front Sensor-HI
48	521 (T/O)	Left Front Sensor-HI
49	461 (O)	ABS Motor Relay
50	—	Not Used
51	—	Not Used
52	606 (W/LB)	Test Connector
53	687 (GY/Y)	Hot in RUN
54	496 (O)	ABS Valve Assembly
55	455 (GY/R) 678 (Y)	ABS Valve Assembly

\* SHO Only.