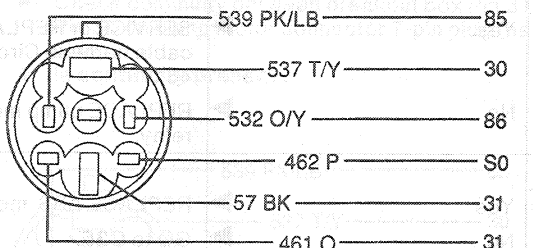
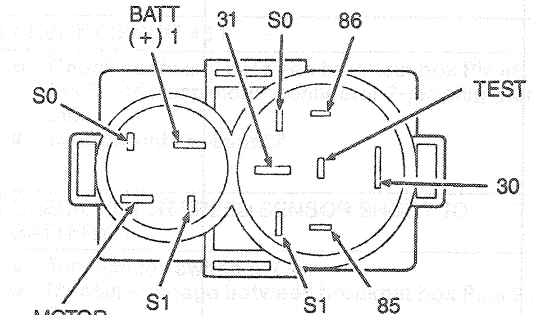
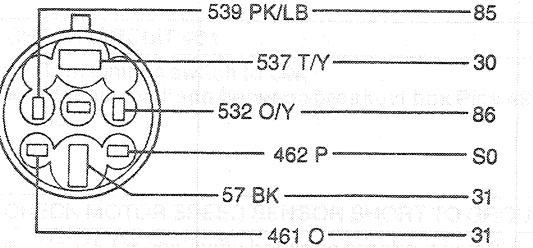


DIAGNOSTIC TESTS (A-J) (Continued)

(Continued)

**PINPOINT TEST C: ANTI-LOCK WARNING INDICATOR ON AFTER VEHICLE STARTS TO MOVE OR FALSE CYCLING OF ANTI-LOCK SYSTEM (Continued)**

TEST STEP	RESULT	ACTION TO TAKE
<p><b>C37</b> CHECK POWER TO RELAY COIL</p> <ul style="list-style-type: none"> <li>● Jumper Pins 34 and 60 at breakout box.</li> <li>● Turn ignition to ON position.</li> <li>● Measure voltage between Pin 86 and ground.</li> </ul>  <p><b>7 PIN PUMP MOTOR RELAY CONNECTOR HARNESS SIDE H7781-B</b></p>	<p>Over 10 volts</p> <p>Less than 10 volts</p>	<p>▶ <b>GO to C38.</b></p> <p>▶ <b>SERVICE or REPLACE</b> cable harness Circuit 532.</p>
<p><b>C38</b> CHECK PUMP MOTOR RELAY COIL</p> <ul style="list-style-type: none"> <li>● Measure resistance between Pins 85 and 86 on pump motor relay.</li> <li>● Is resistance between 45 and 105 ohms?</li> </ul>  <p><b>PUMP MOTOR RELAY H7780-B</b></p>	<p>Yes</p> <p>No</p>	<p>▶ <b>GO to C39.</b></p> <p>▶ <b>REPLACE</b> pump motor relay.</p>
<p><b>C39</b> CHECK CIRCUIT 539</p> <ul style="list-style-type: none"> <li>● Check for continuity between breakout box Pin 15 and Pin 85 on wire harness to pump motor relay connector.</li> <li>● Is continuity present?</li> </ul>  <p><b>7 PIN PUMP MOTOR RELAY CONNECTOR HARNESS SIDE H7781-B</b></p>	<p>Yes</p> <p>No</p>	<p>▶ <b>GO to C40.</b></p> <p>▶ <b>SERVICE or REPLACE</b> cable harness Circuit 539.</p>