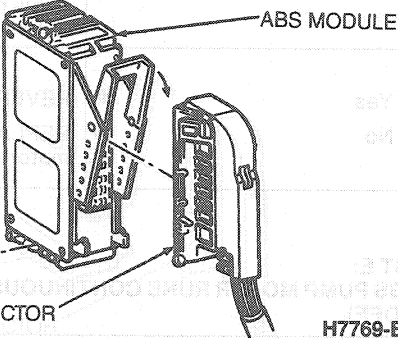
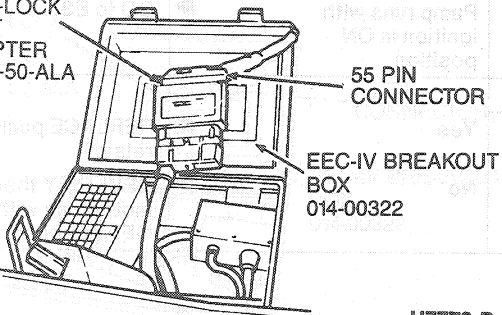


DIAGNOSTIC TESTS (A-J) (Continued)

(Continued)

PINPOINT TEST E:
ANTI-LOCK WARNING INDICATOR SEQUENCE NORMAL — ABS PUMP MOTOR RUNS CONTINUOUSLY (IGNITION ON/IGNITION OFF) (Continued)

ACTION TO TAKE	TEST STEP	RESULT	ACTION TO TAKE
E3	CHECK CIRCUIT 539 TO GROUND		
<ul style="list-style-type: none"> ● Turn ignition switch OFF. ● Disconnect 55-pin plug from ABS module. 	 <p>Diagram showing the ABS MODULE and a 55 PIN CONNECTOR. The connector is labeled H7769-B.</p>	Yes No	GO to E4. GO to E5.
	<ul style="list-style-type: none"> ● Connect EEC-IV Breakout Box 014-00322 with Anti-Lock Test Adapter T90P-50-ALA or equivalent to the anti-lock 55-pin plug wiring harness. 		
	 <p>Diagram showing the ANTI-LOCK TEST ADAPTER T90P-50-ALA, a 55 PIN CONNECTOR, and the EEC-IV BREAKOUT BOX 014-00322. The adapter is labeled H7770-B.</p>		
<ul style="list-style-type: none"> ● Check for continuity between breakout box Pins 15 and 60. ● Is continuity present? 			
E4	CHECK CIRCUIT 539		
<ul style="list-style-type: none"> ● Disconnect pump motor relay from wire harness. ● Check for continuity between breakout box Pins 15 and 60. ● Is continuity present? 		Yes No	SERVICE or REPLACE cable harness Circuit 539. REPLACE pump motor relay.
E5	CHECK ABS MODULE		
<ul style="list-style-type: none"> ● Reconnect pump motor relay and ABS module. ● Turn ignition to ON. ● Does pump motor run? 		Yes No	REPLACE ABS module. REVERIFY symptom.

TH6411D