


ADJUSTMENTS


Pedal Travel Switch

To adjust the pedal travel switch, push the switch plunger fully into the switch housing as shown. This zeroes out the switch adjustment so that it can be automatically reset to the correct dimension during the following steps.

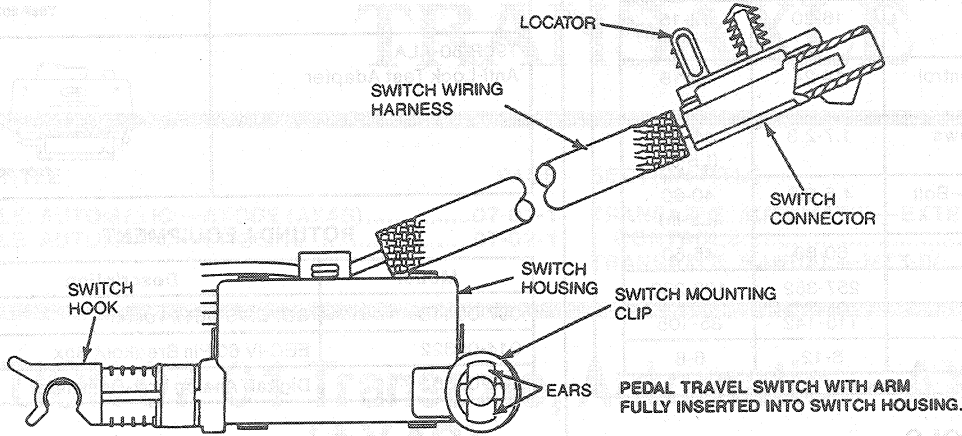

H7150-A

Slowly pull the arm back out of the switch housing past the detent point. At this point it should be impossible to reattach the arm to the pin unless the brake pedal is forced down. To complete the adjustment, depress the brake pedal until the switch hook can be snapped onto the pin. Snap hook onto pin and pull brake pedal up to its normal at rest position. This automatically sets the switch to the proper adjustment. Any time the switch is unhooked from the pin for any reason, the above resetting procedure should be performed to ensure correct switch adjustment.

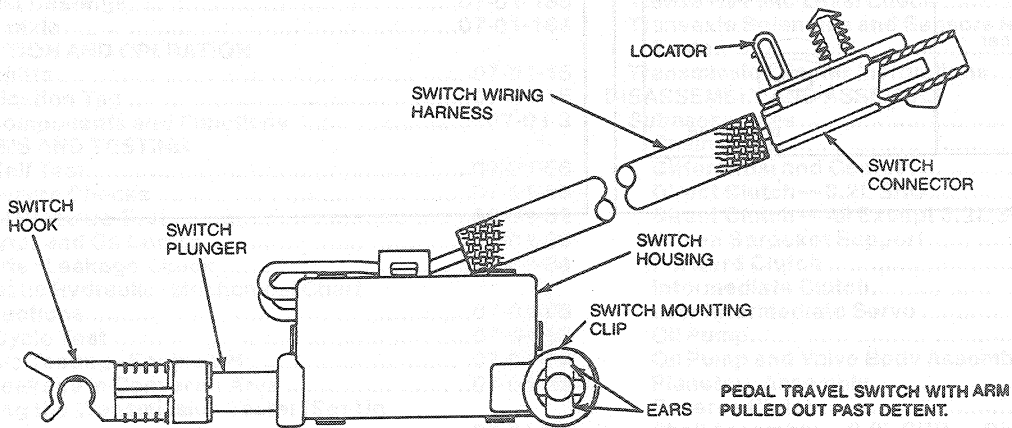

H7151-A