

TRANSAXLE

GROUP

07

(7000)

SECTION TITLE	PAGE	SECTION TITLE	PAGE
TRANSAXLE, AUTOMATIC—AXODE (AX4S).....	07-01-1	TRANSAXLE, AUTOMATIC—EXTERNAL CONTROLS.....	07-05-1
TRANSAXLE, AUTOMATIC—COOLING	07-02-1	TRANSAXLE, MANUAL—MTX-IV.....	07-03-1

SECTION 07-01 Transaxle, Automatic—AXODE (AX4S)

SUBJECT	PAGE	SUBJECT	PAGE
CLEANING AND INSPECTION		DIAGNOSIS AND TESTING (Cont'd.)	
Case	07-01-185	Short to Ground and Solenoid Voltage Tests.....	07-01-62
Converter and Oil Cooler	07-01-186	Stall Test	07-01-85
Forward, Direct, Intermediate and Reverse Clutches	07-01-184	Static Testing - Engine Off	07-01-61
One-Way Clutches	07-01-185	Stator to Impeller Interference Check	07-01-86
Output Shaft.....	07-01-185	Torque Converter End Play Check.....	07-01-87
Planetary Carriers	07-01-185	Torque Converter Reactor One-Way Clutch Check	07-01-86
Servo	07-01-184	Transaxle Fluid Condition Check.....	07-01-82
Speedometer Drive Assembly.....	07-01-185	Transaxle Fluid Cooler Flow Test	07-01-84
Stator to Impeller Interference Check	07-01-186	Transaxle Fluid Leakage Checks.....	07-01-82
Thrust Bearings.....	07-01-185	Transaxle Fluid Level Check	07-01-81
Transaxle	07-01-184	Transaxle Solenoids and Sensors Resistance Tests.....	07-01-62
DESCRIPTION AND OPERATION		Transmission Tester Instructions	07-01-61
Downshifts	07-01-15	DISASSEMBLY AND ASSEMBLY	
Identification Tag	07-01-15	Subassemblies	07-01-113
Main Components and Functions	07-01-3	Chain Cover	07-01-113
DIAGNOSIS AND TESTING		Differential and Gearset	07-01-155
After Self Test	07-01-56	Direct Clutch—3.2L SHO.....	07-01-138
Air Pressure Checks	07-01-85	Direct Clutch—All Except 3.2L SHO	07-01-134
Control Pressure Test	07-01-52	Driven Sprocket Support	07-01-160
Converter and Oil Cooler.....	07-01-86	Forward Clutch	07-01-131
Converter Leakage Check	07-01-84	Intermediate Clutch.....	07-01-141
Diagnostic Hydraulic/Mechanical Chart Instructions.....	07-01-28	Low-Intermediate Servo	07-01-157
Drive Cycle Test	07-01-55	Oil Pump.....	07-01-119
Dynamic Testing - Engine ON	07-01-62	Oil Pump and Valve Body Assembly.....	07-01-116
Fluid Leakage in Converter Area	07-01-83	Planetary Assembly.....	07-01-155
Installing the Transmission Tester (Set-Up Procedures)	07-01-61	Reverse Clutch.....	07-01-152
Oil Cooler Tube Leakage	07-01-83	Shell Assembly—3.2L SHO—Disassembly	07-01-128
On-Board Diagnostic Quick Tests.....	07-01-53	Shell Assembly—3.2L SHO—Assembly.....	07-01-150
Pinpoint Tests	07-01-56	Shell Assembly—All Except 3.2L SHO—Disassembly	07-01-125
Preliminary Testing and Diagnosis	07-01-61	Shell Assembly—All Except 3.2L SHO—Assembly	07-01-147
Removing the Transmission Tester and Clearing DTC's	07-01-63	Speedometer Drive Gear Assembly	07-01-159
Resistance/Continuity Tests	07-01-61	Valve Body	07-01-117
Rotunda Transmission Tester.....	07-01-59	Transaxle Assembly.....	07-01-160
Shift Point Road Test	07-01-81	Transaxle Disassembly.....	07-01-96