


DIAGNOSIS AND TESTING (Continued)

- 3. **Solenoid Activate Buttons:** Energize respective solenoids during click testing and activate selected circuits during DRIVE mode testing.
- 4. **Bench/Drive Switch:** Selects operating mode, either BENCH or DRIVE.

- 5. **Solenoid Select/Gear Select Switch:** Has three functions.
 In BENCH MODE: acts as shift solenoid selector for click testing. In DRIVE MODE: acts as forward gear selector in place of vehicle's PCM controlled shifting. Hydraulic safety mechanisms and overrides are built into the transaxle.
 In OHMS CHECK: allows you to measure ohms.

AXODE (AX4S) Overlay

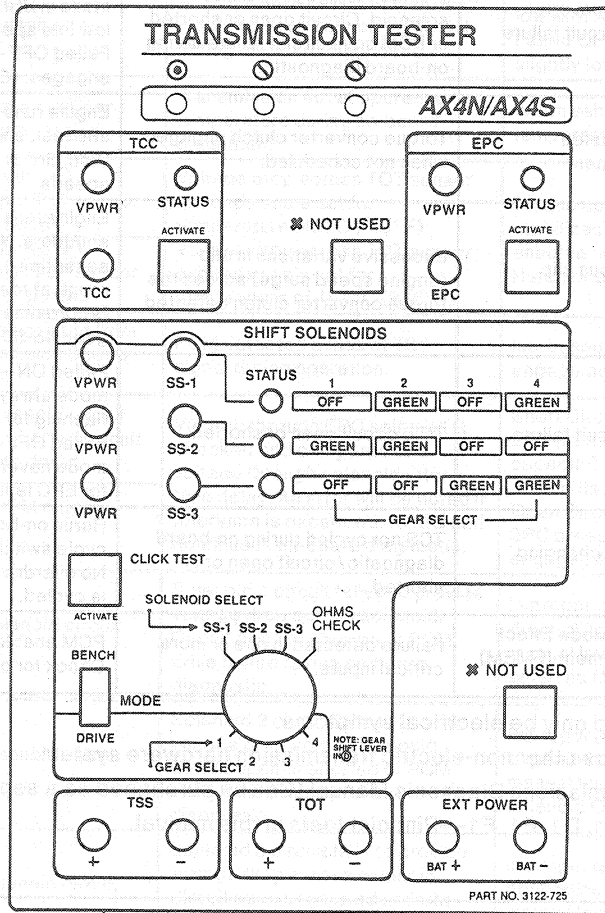

BODY HARNESS CONNECTION AND TSS CONNECTION

CIGAR LIGHTER

D10366-B