 

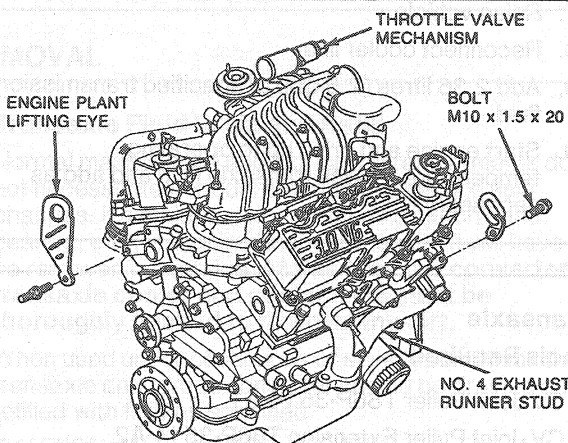


REMOVAL (Continued)


5. When fluid has drained completely reinstall pan bolts.
6. Remove air cleaner assembly, hoses and tubes.
7. Disconnect battery and remove battery.
8. Remove battery tray.
9. Disconnect electrical connectors from engine.
10. Remove bolt retaining main wiring harness bracket.
11. Remove shift lever.
12. On 3.0L install Engine Lifting Eye D81L-6001-D or equivalent to LH rear cylinder with a bolt, M10 x 1.5 x 2.0. The engine plant lifting eye should still be on RH front cylinder. If not, install a second lifting eye as described.

	D88L-6000-A	THREE BAR ENGINE SUPPORT
	D81L-6001-D	ENGINE LIFTING EYES



A9887-E

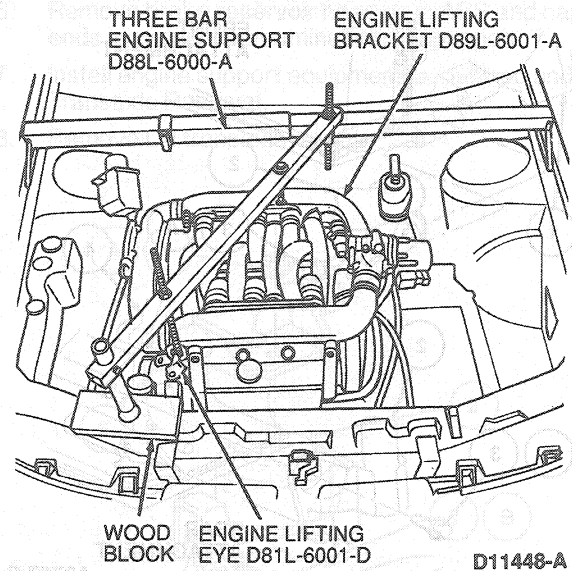13. On 3.2L SHO remove bracket on back of engine that retains wiring harness and coolant line and attach Engine Lifting Bracket D89L-6001-A or equivalent and Engine Lifting Eyes D81L-6001-D or equivalent to generator bracket.



14. On 3.8L install Engine Lifting Eyes to LH front exhaust manifold stud and RH rear exhaust manifold stud.
15. Position Three Bar Engine Support D88L-6000-A or equivalent.
16. Secure wiring harness out of way.
17. Remove radiator sight shield.
18. Position Three Bar Engine Support D88L-6000-A or equivalent.
19. Remove dipstick.
20. Disconnect power steering pump pressure and return line bracket.
21. Remove four 15mm torque converter housing bolts from top of transaxle.
22. Raise vehicle on hoist. Refer to Section 00-02.