


## REMOVAL (Continued)

REMOVAL (Continued)

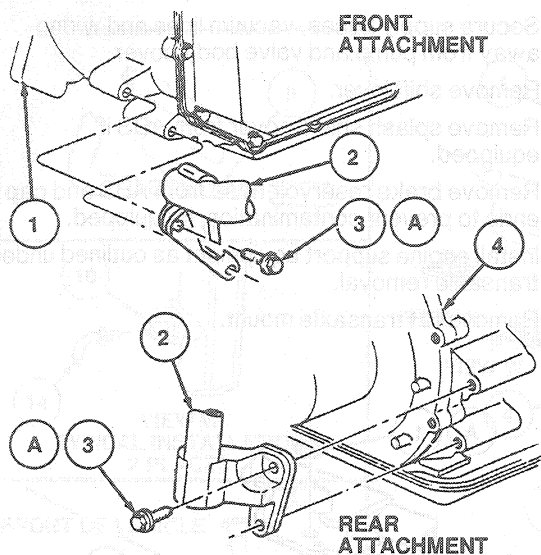


A9707-C

Item	Part Number	Description
1	—	Transaxle
2	6F065	Support Assy
3A	N605922-S102	Bolt (2 Req'd)
4	07002	Transaxle
A		Tighten to 54-75 N·m (40-55 Lb·Ft)

TA9707C

17. Position drain pan and remove remaining transaxle side pan bolts and remove pan.
18. Using a screwdriver, position manual shift shaft in the park position.
19. Disconnect upper bulkhead connector wiring retainer clip from valve body.
20. Disconnect electrical connectors.  
**CAUTION: Do not remove oil pump cover bolts.**
21. Remove valve body retaining bolts, disengage linkage and remove valve body.

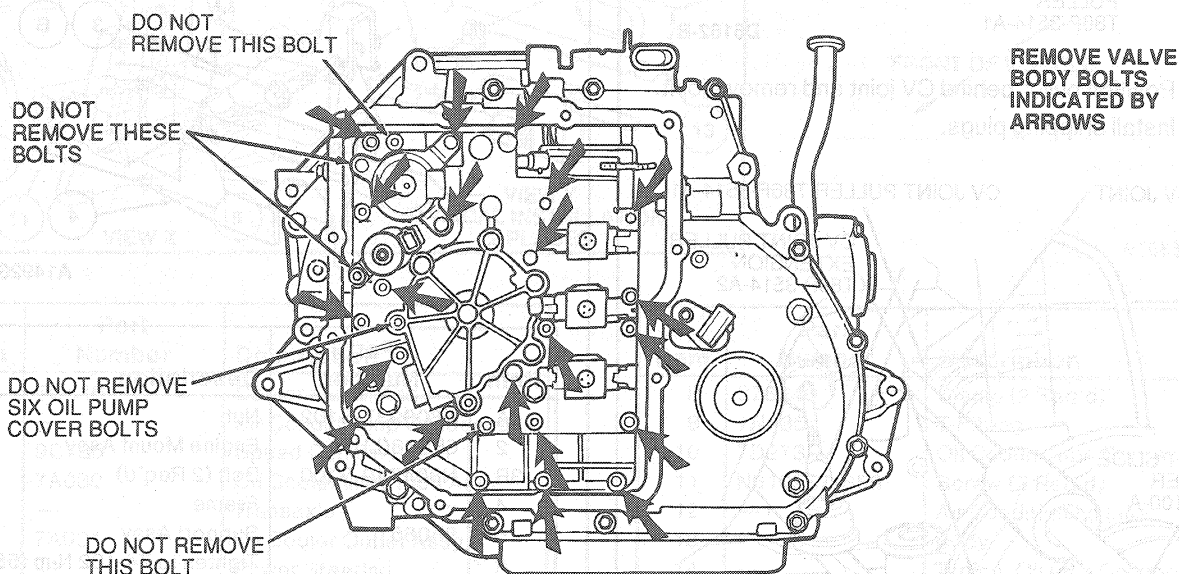

D8071-C

## DISASSEMBLY AND ASSEMBLY

## Transaxle Disassembly

## Tools Required:

- Impact Slide Hammer T50T-100-A
- Bench Mounted Holding Fixture T57L-500-B
- Impact Slide Hammer T59L-100-B
- O-Ring Remover T71P-19703-C
- Front Cover Seal Remover T74P-6700-A
- Torque Converter Handles T81P-7902-C

- Lube Tube Remover T86P-70001-A
- Stator and Driven Sprocket Bearing Replacer T86P-70043-A
- Front Clutch Loading Tool T86P-70389-A
- Bearing Race Puller T88T-7120-A
- Step Plate Adapter D80L-630-3
- Locknut Pin Remover D81P-3504-N