



DISASSEMBLY AND ASSEMBLY (Continued)

- 49. Remove two 8mm park rod abutment bolts. Remove abutment. Remove park rod.

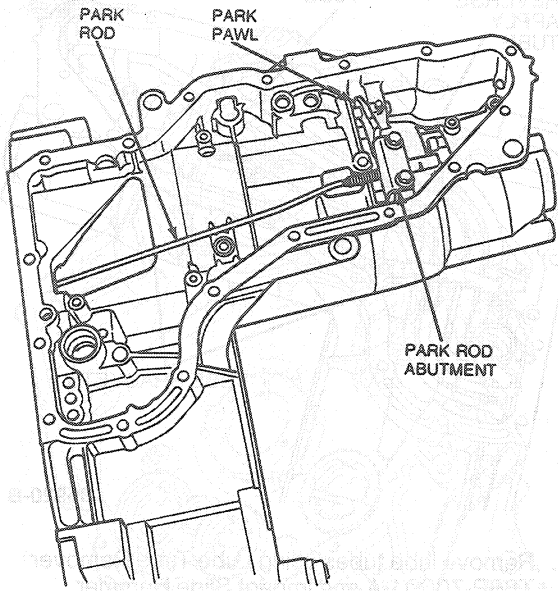

D6117-A


- 50. Using Locknut Pin Remover D81P-3504-N or equivalent, remove park pawl shaft roll pin.
- 51. Use magnet to remove park pawl shaft, and remove park pawl and return spring.

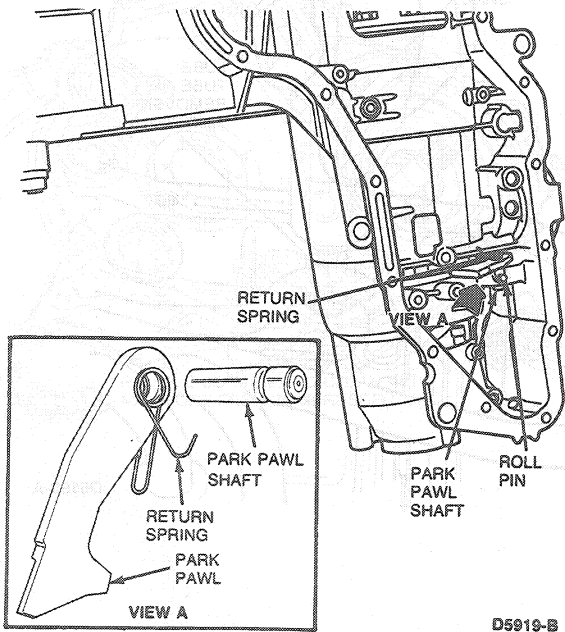

D5919-B

- 52. Rotate transaxle to vertical position. Using Front Clutch Loading Tool T86P-70389-A, install hook end of tool into one of the six lube holes in front sun and shell assembly. Position notched block over edge of assembly and tighten handle. Do not over-tighten handle. Lift assembly out of case.

All Except SHO

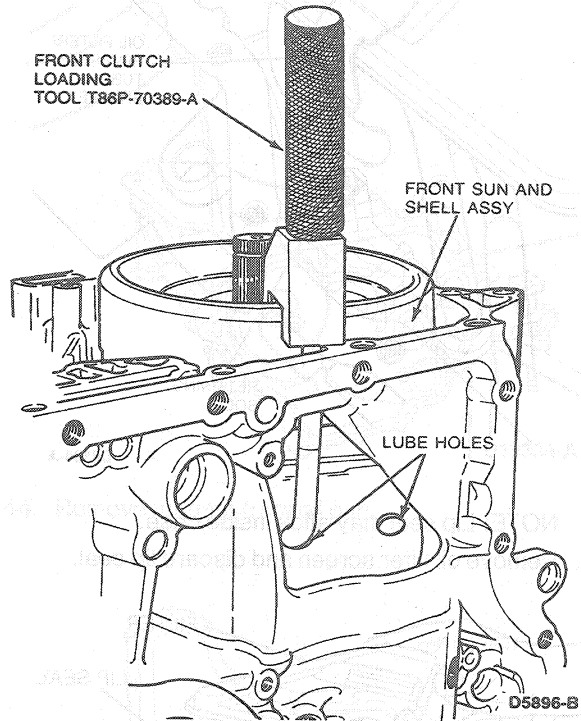

D5896-B