


DISASSEMBLY AND ASSEMBLY (Continued)

Forward Clutch

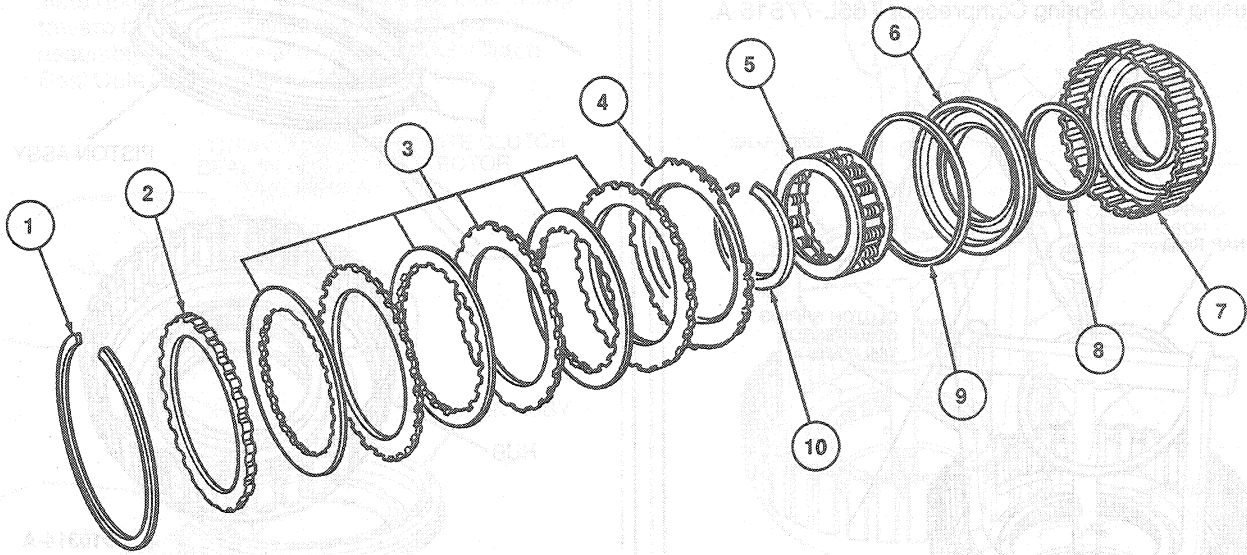

D8046-A

Item	Part Number	Description
1	7D483	Snap Ring
2	7B066	Pressure Plate
3	—	Clutch Pack
4	7E085	Wave Spring (All Except 3.2L SHO)
5	7G299	Return Spring

Item	Part Number	Description
6	7A262	Piston
7	7A360	Clutch Hub Cylinder
8	7A548	Piston Inner Seal
9	7F224	Piston Outer Seal
10	N803053-S	Snap Ring

TD8046A

(Continued)


Disassembly

Tools Required:

- Clutch Spring Compressor T65L-77515-A
- Lock Ring Plier D81P-77060-A
- Forward / Intermediate Clutch Seal Outer Lip Protector T86P-70548-A
- Dial Indicator with Bracketry TOOL-4201-C

NOTE: The number of components in clutch pack will vary with application.

1. Remove snap ring, pressure plate, clutch pack and wave spring (all except 3.2L SHO).

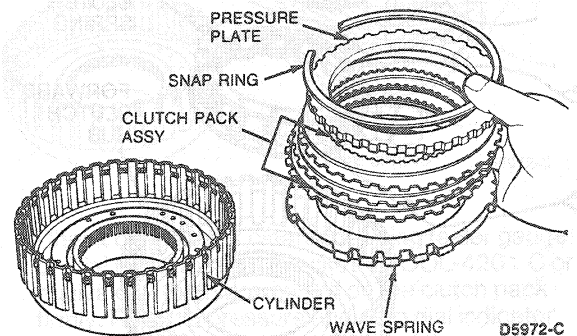

D5972-C