

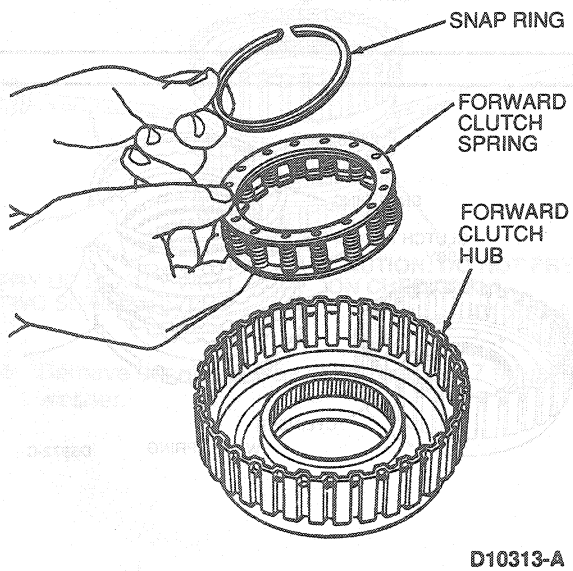


DISASSEMBLY AND ASSEMBLY (Continued)

- 2. Remove snap ring using Lock Ring Plier D81P-77060-A or equivalent and return spring using Clutch Spring Compressor T65L-77515-A.

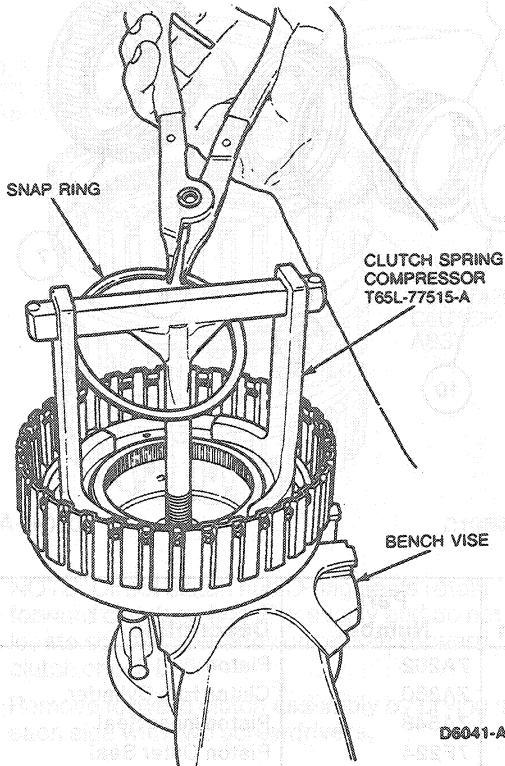


- 3. Remove piston assembly from hub.

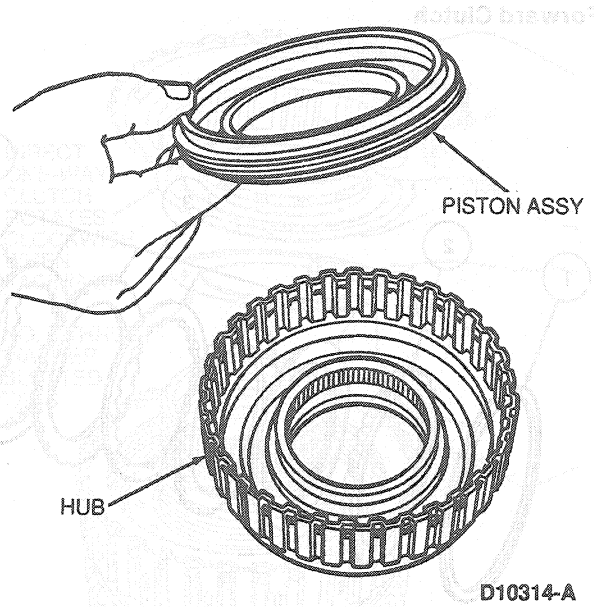

- 4. Remove piston inner and outer seals.

Inner Piston Seal

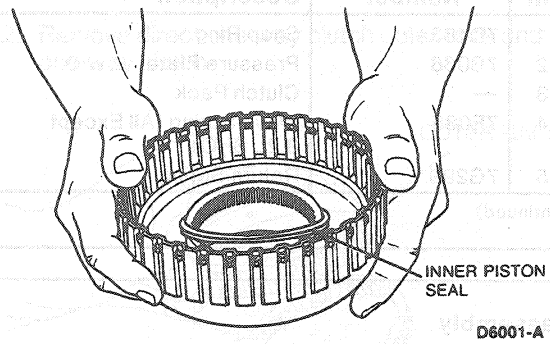

Outer Piston Seal

