



DISASSEMBLY AND ASSEMBLY (Continued)

Direct Clutch—3.2L SHO

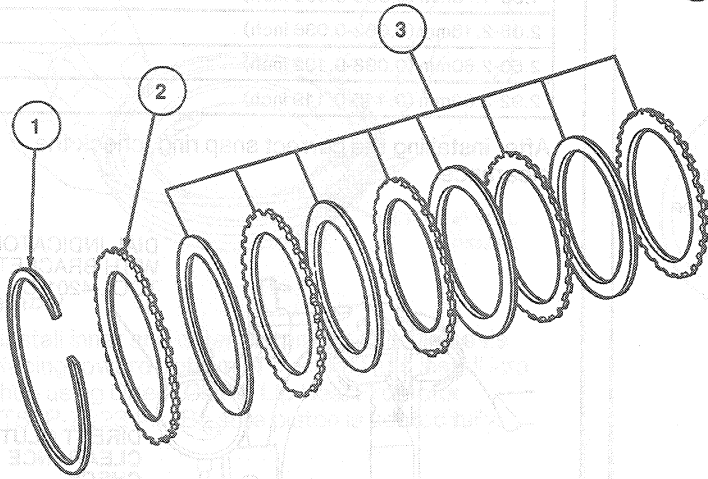

Item	Part Number	Description
1	7D483	Snap Ring
2	7B066	Pressure Plate
3	—	Clutch Pack
4	7F235	Return Spring

(Continued)

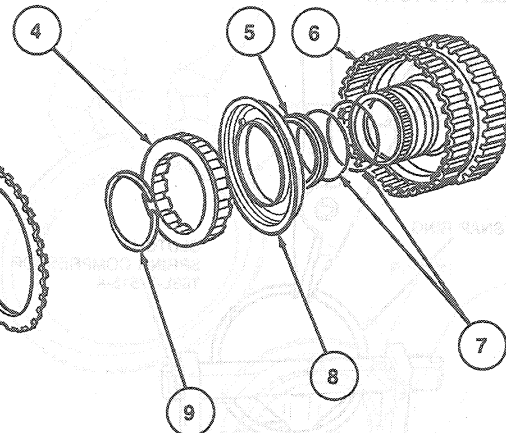

Item	Part Number	Description
5	7F225	Inner Piston Seal
6	7G120	Clutch Cylinder
7	7G102	O-Rings
8	7A262	Piston
9	7C122	Snap Ring

D10599-A

Disassembly


Tools Required:

- Clutch Spring Compressor T65L-775 15-A
- Dial Indicator with Bracketry TOOL-4201-C

1. Remove O-ring seals.

NOTE: Number of components in clutch pack will vary with application.

2. Remove snap ring, pressure plate and clutch pack.

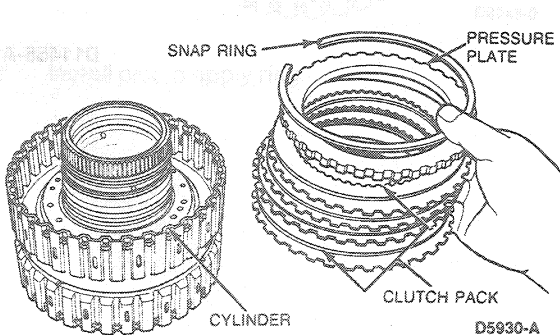

CAUTION: Do not allow tool to bottom out on piston assembly.

