

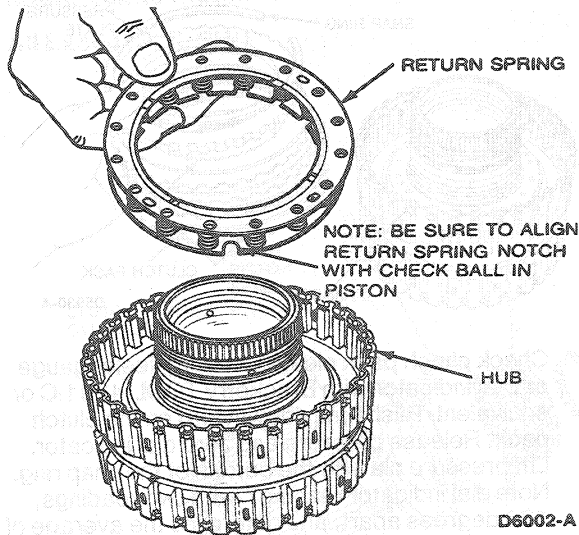


DISASSEMBLY AND ASSEMBLY (Continued)

- 3. Remove snap ring and return spring using Clutch Spring Compressor T65L-77515-A.

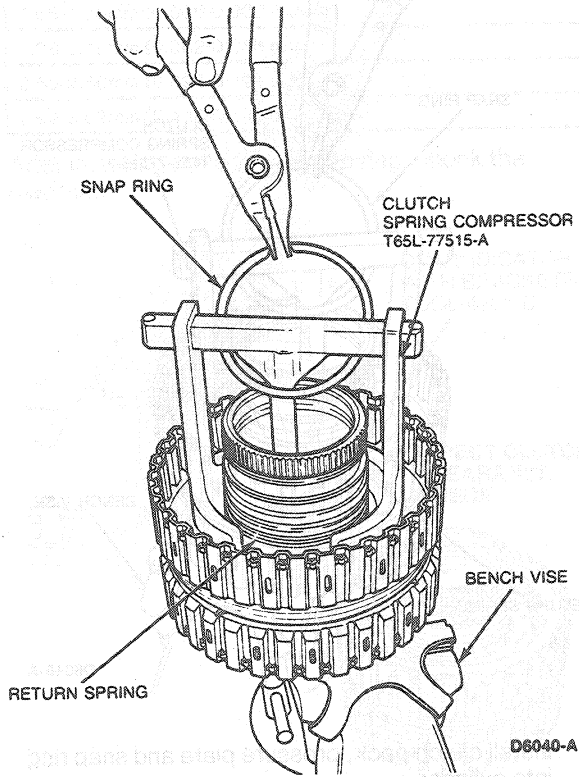

- 4. Remove two-piece piston assembly.

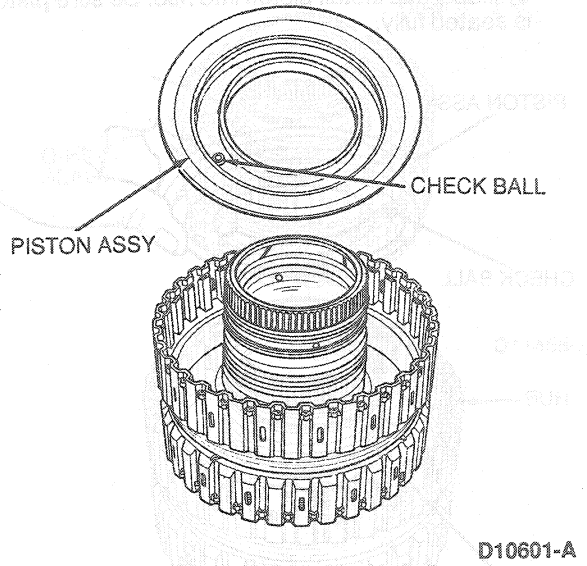

- 5. Remove piston inner seal.

