

DISASSEMBLY AND ASSEMBLY (Continued)


Disassembly

Tools Required:



- Clutch Spring Compressor T65L-77515-A
- Dial Indicator with Bracketry TOOL-4201-C

NOTE: Number of components in the clutch pack will vary with application.


1. Remove snap ring, pressure plate and clutch pack assembly.

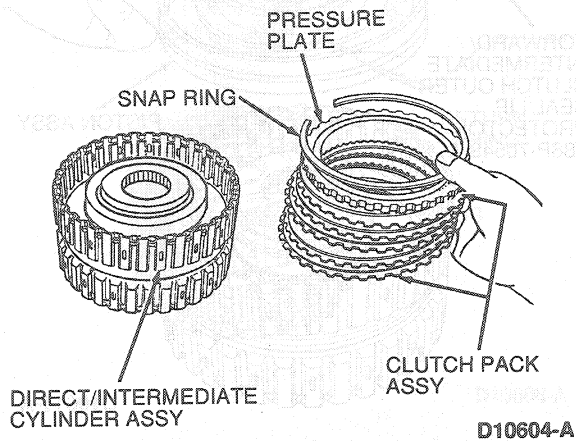

2. Remove snap ring return piston and return spring, using Clutch Spring Compressor T65L-77515-A.

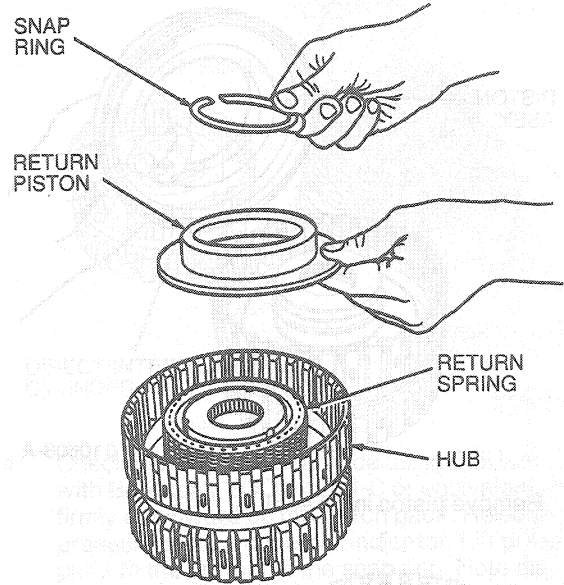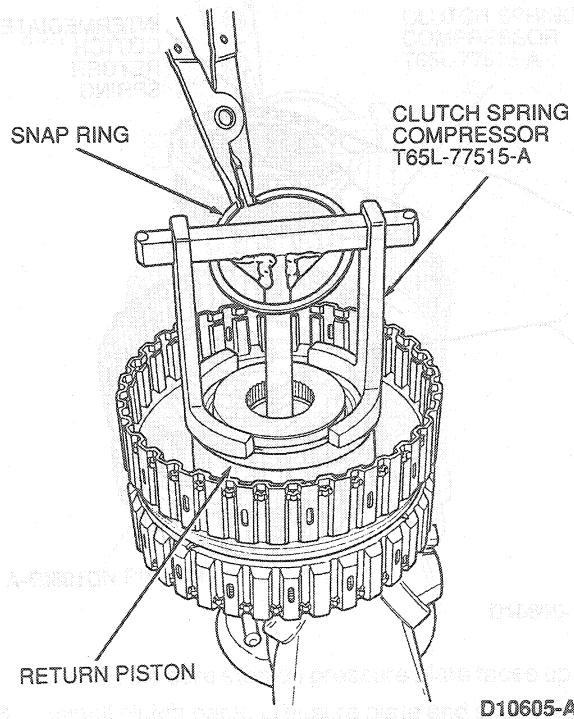

D10606-A

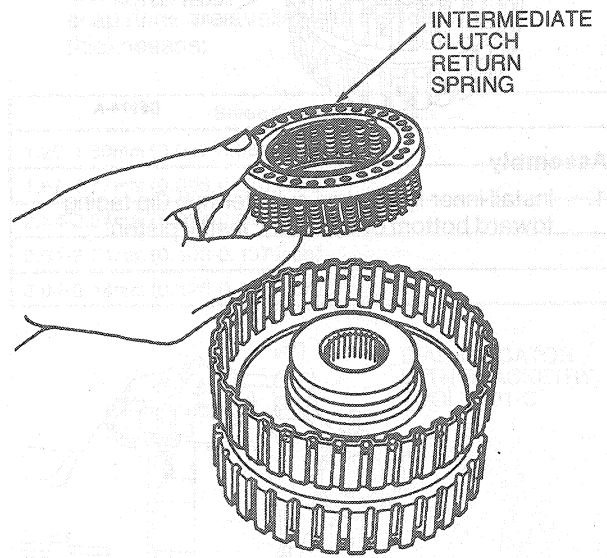

D10607-A