



REMOVAL AND INSTALLATION (Continued)

- 5. Using a 13mm wrench, remove the shift fork interlock sleeve retaining pin.

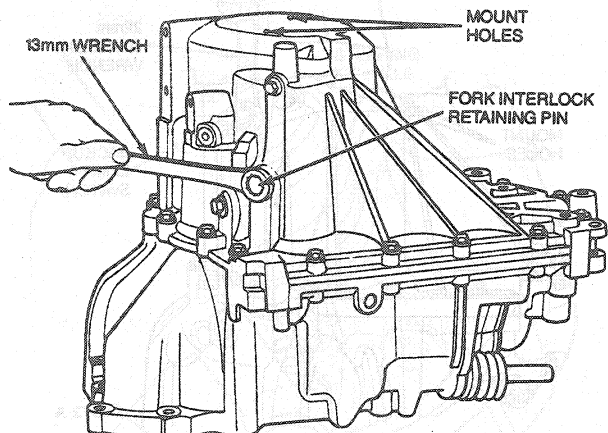


C6363-A

- 6. Using a 3/8-inch extension bar and ratchet, remove the fill plug.

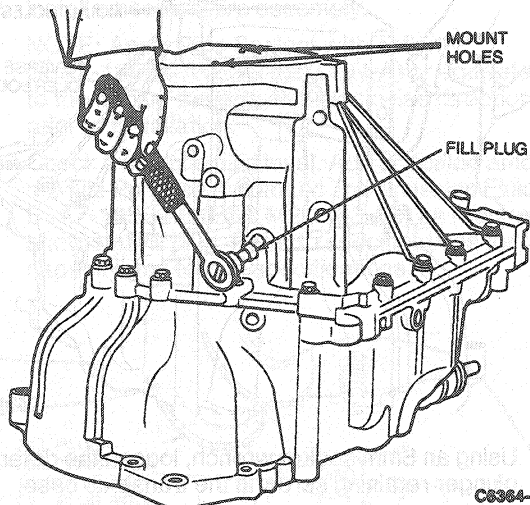


C6364-A

- 7. Using a 10mm socket wrench, remove the 15 clutch housing-to-transaxle case retaining bolts.

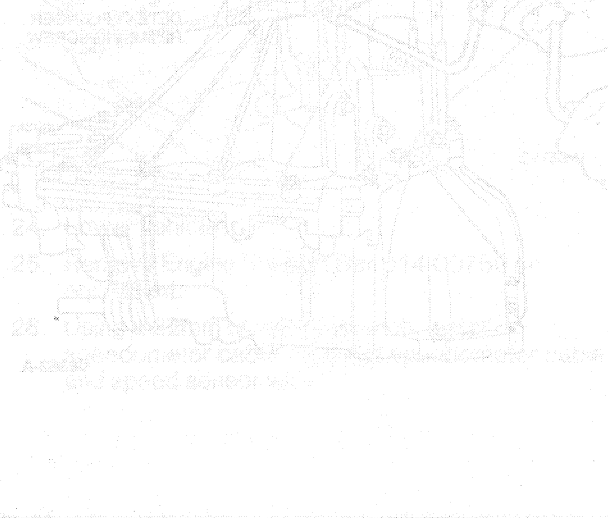


C6365-A

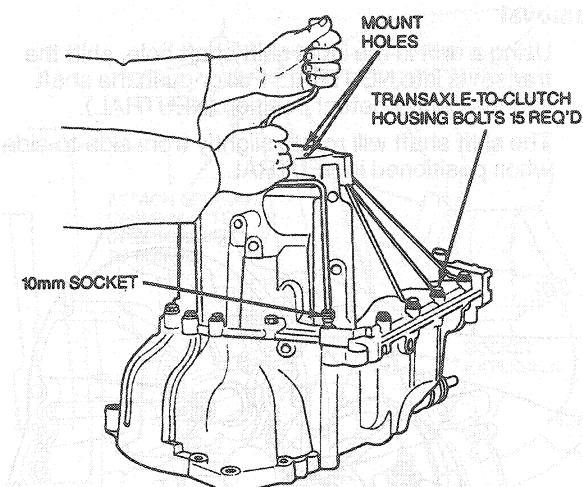

C6365-A

- 8. Using a plastic tipped hammer, tap the transaxle case to break the seal between the case halves.

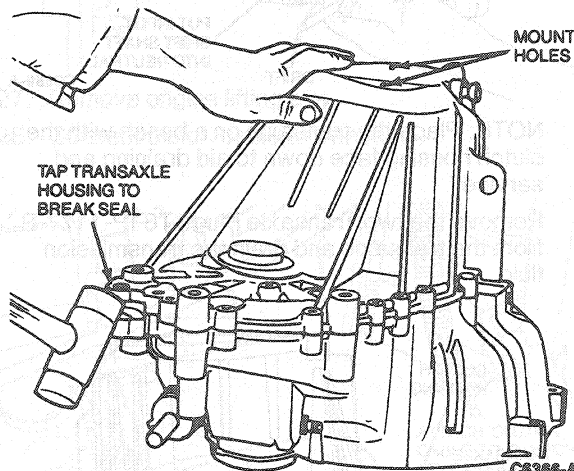

C6366-A

NOTE: Do not insert pry bars or screwdrivers between the case halves.