


DISASSEMBLY AND ASSEMBLY (Continued)

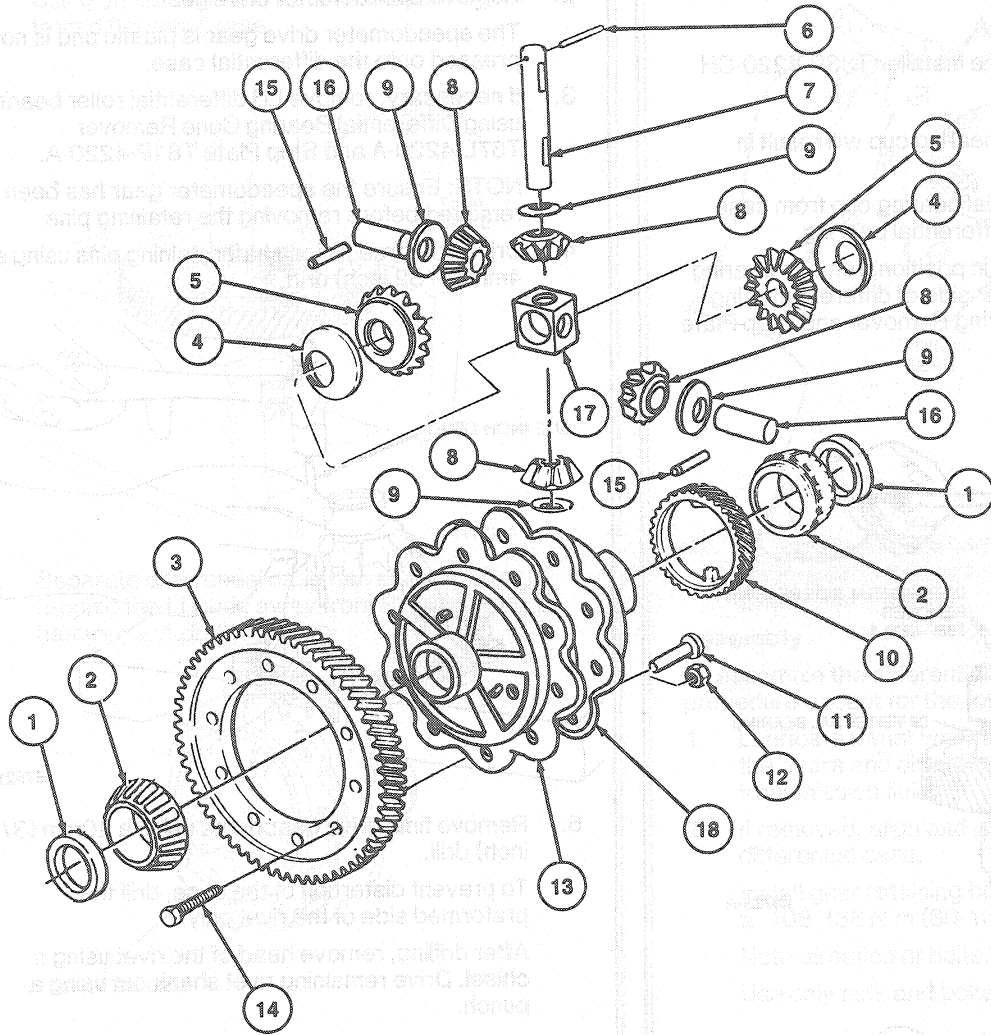

E6198-B

Item	Part Number	Description
1	4222	Differential Bearing Cup
2	4221	Diff. Bearing Cone and Roller Assy
3	7F343	Final Drive Ring Gear
4	4228	Diff. Side Gear Thrust Washer (2 Req'd)
5	4236	Differential Side Gear (2 Req'd)
6	N800979-S	Pinion Shaft Retaining Pin
7	4211	Pinion Gear Shaft
8	4215	Pinion Gear (4 Req'd)
9	4230	Thrust Washer (4 Req'd)

(Continued)

Item	Part Number	Description
10	17285	Speedometer Drive Gear
11	N802940-S	Final Drive Gear Attaching Rivet
12	—	Final Drive Gear Attaching Nut (For Service Replacement of Gear Only)
13	4206	LH Differential Gear Case
14	—	Final Drive Gear Attaching Bolt (For Service Replacement of Gear Only)
15	N800979-S	Spring Pin (2 Req'd)
16	4419	Pinion Shaft (2 Req'd)
17	4420	Pinion Shaft Seat
18	4205	RH Differential Gear Case

Tools Required:

- Differential Bearing Cone Remover T57L-4220-A