


MAJOR SERVICE OPERATIONS (Continued)

- Slide the speedometer driven gear from the retainer.

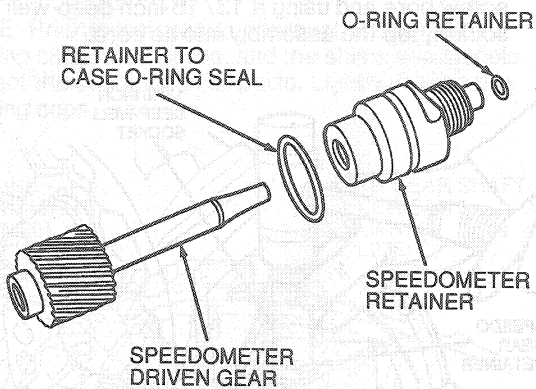


C5390-C

NOTE: Prior to assembly of the speedometer driven gear, clean all parts thoroughly. Inspect all parts and replace if damaged. Lightly grease the O-ring on the retainer.


- Carefully remove the O-ring seal from its groove in the retainer.

To assemble the speedometer driven gear, reverse Removal procedure.

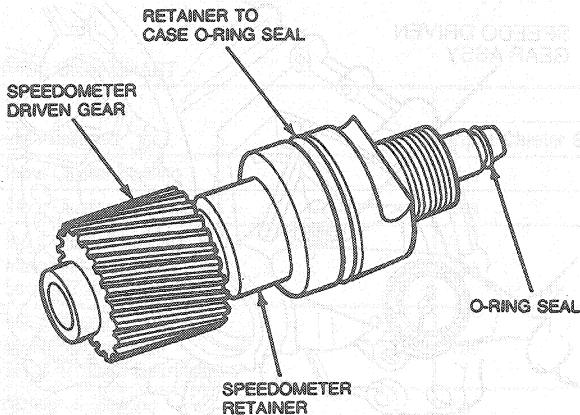

C5388-A

External Gear Shift Linkage

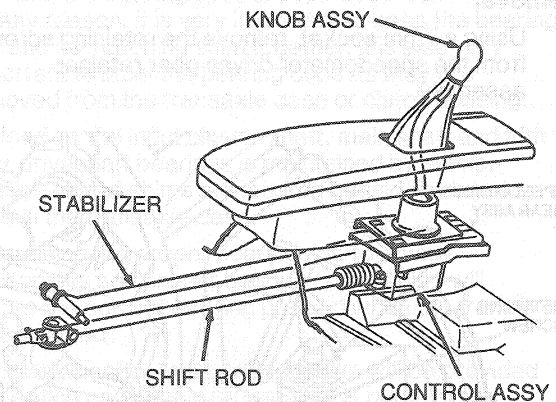


C9696-A

Shift Knob, Boot and Control Assembly

Removal

- Remove leather wrapped knob by rotating knob counterclockwise.
- Remove console applique and boot assembly. Slide assembly off shift lever.

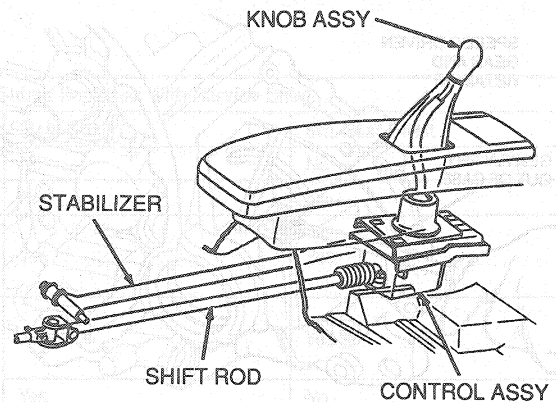

C9696-A

- Raise vehicle on hoist. Refer to Section 00-02.
- Remove exhaust resonator pipe to clear control assembly heat shield.
- Remove shift mechanism stabilizer bar-to-transaxle retaining bolt. Remove shift rod-to-shift shaft retaining nut and bolt. Remove rods from transaxle.
- Remove two nuts retaining rear mount-to-lower mounting bracket.
- Pull control assembly down to remove it from vehicle.