


REMOVAL AND INSTALLATION (Continued)

5. Check transaxle operation for all selector lever detent positions.

Shift Lever and Housing Assembly

Removal

1. Remove console assembly. Refer to Section 01-12.
2. Remove shift knob and bezel assembly as outlined.
3. Remove transaxle shift cable retaining screws from lever and housing assembly.
4. Pull the cable from the plastic snap retainer on assembly.
5. Remove key interlock cable retaining screw from shifter housing and slide cable out of shifter interlock cam.

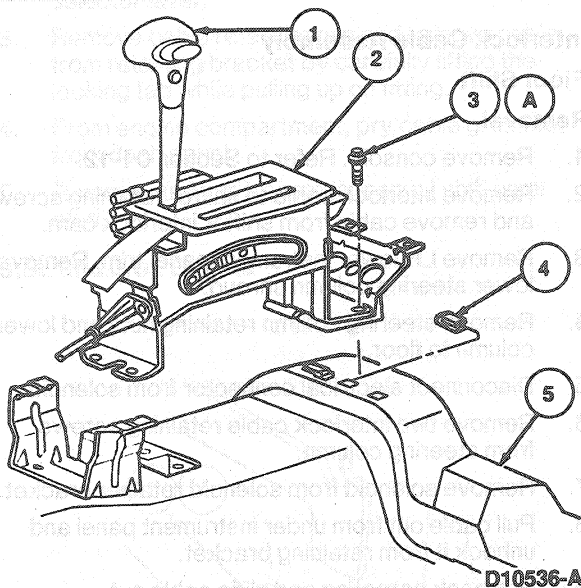

Item	Part Number	Description
1	7H263	Knob Assy
2	7K004	Lever and Housing Assy
3A	N605774-S2	Bolt (4 Req'd)
4	N623332-S2	J-Nut (4 Req'd)
5	—	Floorpan Assy
A		Tighten to 6-8 N-m (5-6 Lb-Ft)

6. Remove four bolts retaining lever and housing assembly to floorpan. Remove assembly.

Installation

1. Position control cable assembly into lever and housing assembly and install retaining screws.
2. Snap cable end into plastic snap retainer on the lever housing assembly.
3. Install lever and housing assembly onto floorpan and secure with four bolts. Tighten to 6-8 N-m (5-6 lb-ft).
4. Connect interlock cable to shifter interlock cam. Install cable retaining screw.
5. Position bezel assembly on lever and housing assembly. Secure with four screws.
6. Install console on lever and housing assembly with two screws.
7. Install shift knob as outlined.
8. Adjust control linkage.
9. Check transaxle operation in each selector lever detent position.

Indicator Bulb

Floor Shift

Removal

1. Remove shift knob as outlined.
2. Remove bezel as outlined.
3. Remove bulb assembly from bezel.
4. Remove indicator bulb.

Installation

1. Install indicator bulb onto indicator bulb assembly.
2. Connect light housing to bezel assembly.
3. Install shift bezel.
4. Install shift knob.

Shift Control Cable Assembly

Floor Shift

Removal

1. Remove console. Disconnect cable and remove shifter assembly as outlined.
2. Pull back carpeting.