

## REMOVAL AND INSTALLATION (Continued)

- Check for proper interlock operation. The ignition key should be removable only with the shifter in PARK. The shifter should be locked in the PARK position with the key removed.

**Column Shift**

**NOTE:** Whenever the cable is removed from the cable retaining brackets for any reason, the cable must be replaced.

**NOTE:** Whenever a steering column, engine or transaxle removal is required, do not remove shift control cable from the retaining brackets. The bracket must be removed with the cable attached.

**Removal**


- From under the instrument panel, remove shift control cable and retaining bracket from steering column.
- Remove cable plastic terminal from column selector lever pivot ball, using a screwdriver, by prying between the cable plastic terminal and selector lever.
- Remove cable retaining clip and remove cable from retaining bracket by carefully lifting the locking tab while pulling up on fitting.
- From engine compartment, pry cable grommet from dash panel.
- Remove nut from transaxle manual shift lever stud.

**3.8L and 3.0L Engine**

- Remove cable locking tab and carefully remove cable from retaining bracket.
- Remove shift cable from cable retaining bracket on transaxle and, from the engine compartment, pull cable through dash panel opening.

**Installation**

- From the engine compartment, feed plastic terminal end of cable through opening in dash panel.
- Press rubber boot on shift control cable into dash panel.
- From engine compartment, install cable into cable retaining bracket on transaxle and make sure locking tab is in proper location.
- Place cable on transaxle manual shift lever stud. Install cable retaining nut loosely.
- From the passenger compartment, install cable-to-steering column retaining bracket onto cable and make sure locking tab is in proper location.
- Install cable and bracket to steering column with two retaining screws. Tighten to 8-13 N·m (6-9 lb-ft).
- Snap cable plastic terminal to selector lever pivot ball on steering column.
- Adjust cable control as outlined.

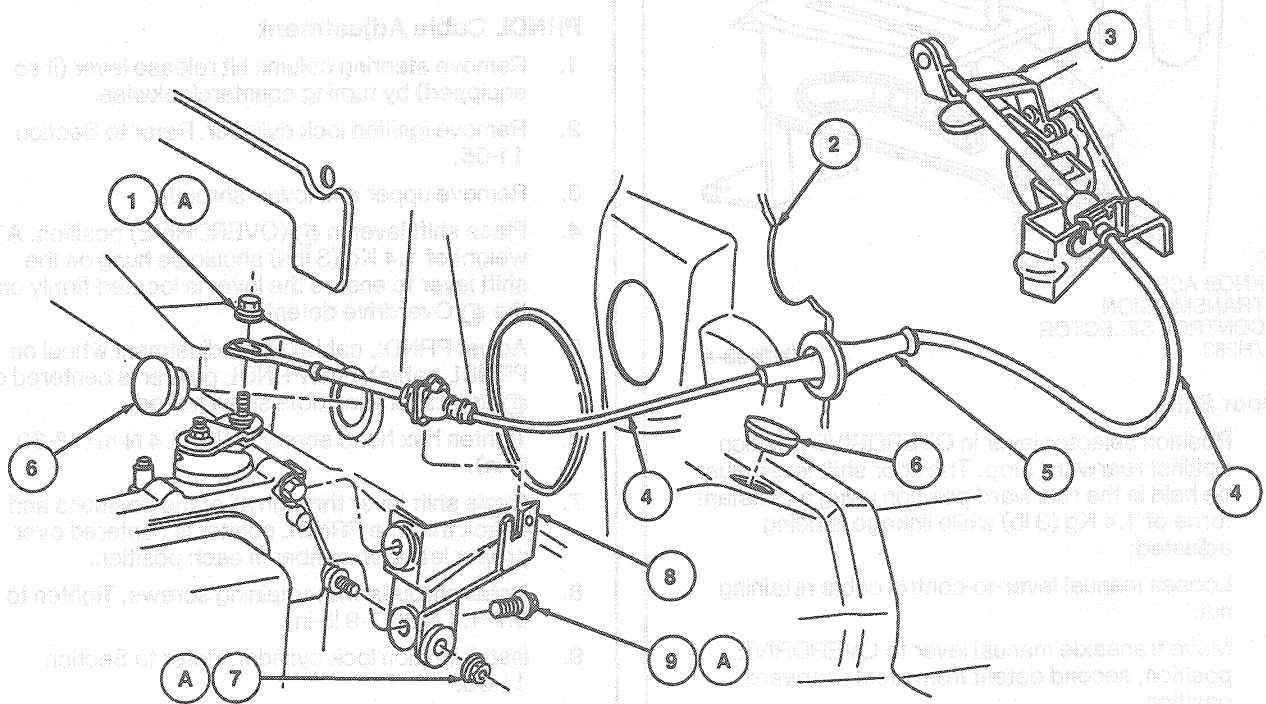

D6579-E