


## REMOVAL AND INSTALLATION (Continued)

- Grasp the extended tip of the clutch cable with a pair of pliers and unhook clutch cable from clutch bearing release lever.

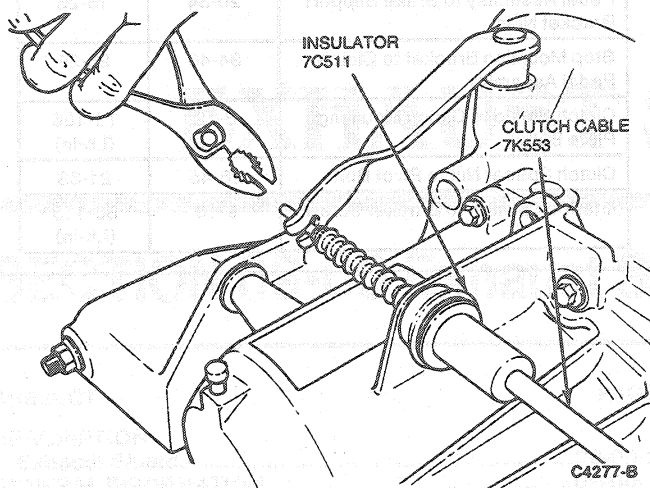

- Disconnect cable from insulator that is located on the rib of transaxle.
- Pull cable out through recess between clutch pedal and gear quadrant, and from insulator on pedal assembly.
- Withdraw cable through engine compartment.

**Installation**

**CAUTION:** The clutch pedal must be lifted to disengage the adjusting mechanism during cable installation. Failure to do so will result in damage to the self-adjuster mechanism.


**CAUTION:** Under no circumstances should a prying instrument such as a screwdriver or a pry bar be used to install the cable into the quadrant. Damage to quadrant may result.

**NOTE:** If the clutch pedal assembly was removed, the cable may be installed through the passenger compartment.

- Insert clutch cable assembly from engine or passenger compartment through dash panel and dash panel grommet.

**NOTE:** Ensure cable is routed inboard of the brake lines and not trapped at the spring tower by the brake lines.

- With the gear quadrant at the window stop position, push clutch cable through insulator on stop bracket, and through recess between pedal and gear quadrant.

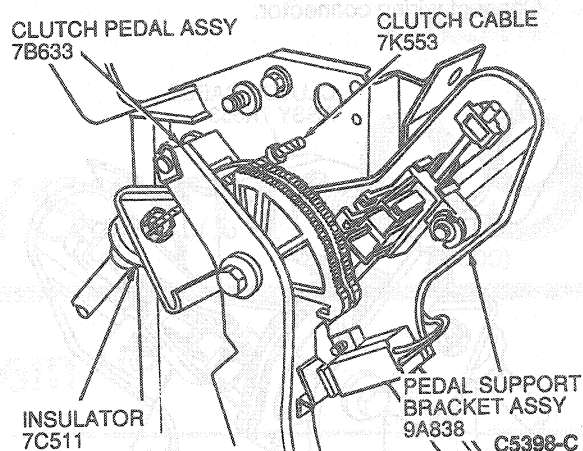

- With clutch pedal lifted up to release pawl, rotate gear quadrant forward. Hook cable into gear quadrant.
- Secure clutch shield on clutch mounting plate.
- Secure pedal in upmost position using a piece of wire, cord, tape or similar device.
- Install clutch cable in insulator on rib of transaxle.
- Hook cable into clutch release lever in engine compartment.
- Remove device used to temporarily secure pedal against its stop.
- Adjust clutch by depressing clutch pedal several times.
- Install air cleaner.
- Connect battery ground cable.

**Starter/Clutch Interlock Switch****Removal**

- Disconnect wiring connector.
- Remove clutch interlock retaining screw and clip, then remove switch.

**Installation**

**NOTE:** Always install the switch with the self-adjusting clip about 25.4mm (1 inch) from the end of the rod. The clutch pedal must be fully up (clutch engaged), otherwise the switch may be misadjusted.

- Insert eyelet end of rod over pin on clutch pedal and secure with clip.
- Align mounting boss with corresponding hole in bracket and install screw. Tighten to 9-13 N·m (80-115 lb-in).
- Reset clutch interlock switch by pressing clutch pedal to floor.