


REMOVAL AND INSTALLATION

Throttle Cable

Removal and Installation

1. Remove intake air duct assembly. Refer to Section 03-12.
2. Using a suitable tool, remove throttle cable snap-in nylon bushing from pedal arm.
3. Remove throttle cable housing from dash panel by removing two screws retaining throttle cable to dash panel and pushing outward from inside passenger compartment.
4. On 3.0L SFI engine, remove accelerator control splash shield (9E766).
5. Remove speed control cable from throttle cable, if so equipped. Refer to Section 10-03.
On 3.0L and 3.2L SHO, unwind cable core wire from pulley and slide cable end fitting out of slot in pulley.
6. Disconnect throttle cable at throttle body throttle lever by inserting a screwdriver between throttle cable and throttle lever and giving a twist.

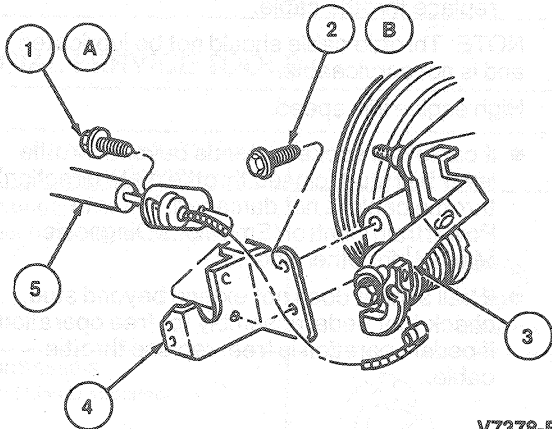

V7378-B

Item	Part Number	Description
1A	W611624-S36	Screw
2B	N605530-S36 (3.0L SFI) N605905-S2 (All Except 3.0L SFI)	Bolt
3	—	Pulley
4	9723	Accelerator Cable Bracket
5	9A758	Throttle Cable
A		Tighten to 5.2-7.2 N-m (47-63 Lb-In)

(Continued)

Item	Part Number	Description
B		Tighten to 15-20 N-m (11-14 Lb-Ft)

7. Remove accelerator cable bracket (9723) retaining screw. Remove throttle cable from bracket slot.
8. To install, reverse Removal procedure.

Accelerator Cable Bracket

Removal and Installation

1. Remove air duct assembly and accelerator cable bracket (3.0L SFI engines). Refer to Section 03-12.
2. Disconnect throttle cable at throttle body throttle lever by inserting a screwdriver between throttle cable and throttle lever and giving a twist. On 3.0L and 3.2L SHO, unwind cable core wire from pulley and slide end fitting out of slot on pulley.
3. Remove throttle cable housing to bracket retaining screw.
4. Remove speed control cable from accelerator cable bracket, if so equipped. Refer to Section 10-03.
5. Remove bolts securing accelerator cable bracket to engine.
6. To install, reverse Removal procedure and tighten accelerator cable bracket bolts to 14-20 N-m (10-15 Lb-Ft).

Accelerator Pedal and Shaft Assembly

Removal and Installation

1. Using a suitable tool, push the throttle cable nylon bushing, from back side of arm, out of the accelerator pedal arm.
2. Remove the accelerator pedal and shaft (9725) retaining nuts.
3. To install, reverse Removal procedure. Tighten accelerator pedal and shaft nuts to 14-20 N-m (10-15 lb-ft) and check pedal for smooth operation.