


ADJUSTMENTS


Linkage Actuator Cable

1. Remove speed control actuator cable retaining clip.
2. Push actuator cable through adjuster until slight tension is felt.
3. Insert cable retaining clip and snap into place.

3.0L Base Engine

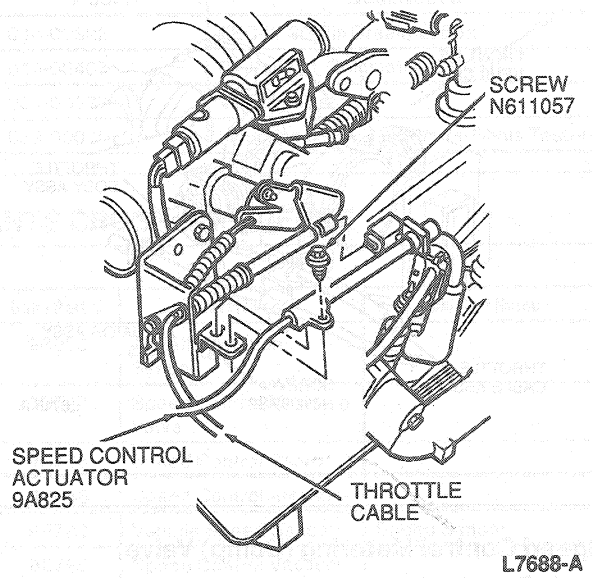

3.8L Engine

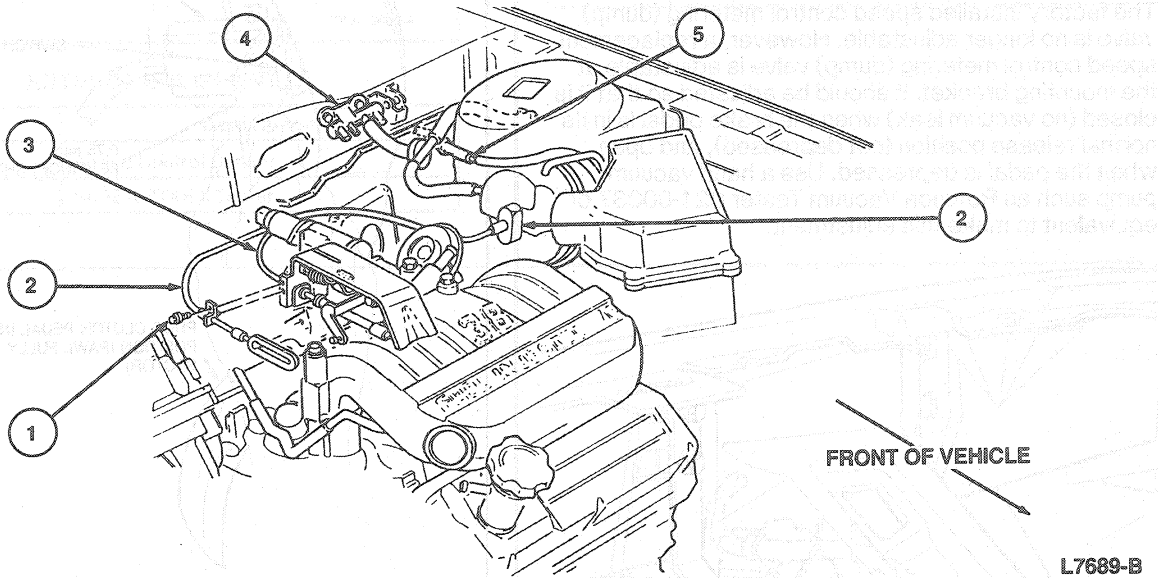

Item	Part Number	Description
1	N611057-S2	Screw
2	9A825	Speed Control Actuator
3	—	Throttle Cable
4	—	Vacuum Distribution Block
5	—	To Speed Control Metering (Dump) Valve