

REMOVAL AND INSTALLATION (Continued)

3. Loosen hose clamp at cooler. Disconnect hose and drain fluid into a suitable container.
4. Remove shift mount bracket.
5. Cut tie straps and remove heat shield from steering gear.
6. Lower vehicle.
7. Loosen hose clamp at reservoir and disconnect return line.
8. Remove hose from vehicle.

Installation

1. Position reservoir-to-cooler hose in vehicle.
2. Connect hose to reservoir and tighten clamp to 1.4-2 N·m (13-17 lb-in).
3. Raise vehicle.
4. Position heat shield at steering gear and install tie straps.
5. Install shift mount bracket.
6. Connect hose to cooler and tighten clamp to 1.4-2 N·m (13-17 lb-in).
7. Lower vehicle.

8. Connect battery ground cable.
9. Fill system. Refer to Section 11-00.

Cooler

Taurus SHO

Removal

1. Disconnect battery cable.
2. Loosen hose clamps at cooler and remove return lines from cooler.
3. Remove two screws retaining cooler assembly to vehicle. Remove cooler.

Installation

1. Position cooler and install two screws. Tighten to 18-28 N·m (14-20 lb-ft).
2. Connect return line hoses to cooler. Position hose clamps and tighten to 1.4-2 N·m (13-17 lb-in).
3. Connect battery ground cable.
4. Fill system. Refer to Section 11-00.

