

DESCRIPTION (Continued)

Item	Part Number	Description	Item	Part Number	Description
1	—	Air Bag Module	43	7A216	Trans Control Selector Position Insert
2	N804385-S100	Steering Wheel Bolt	44	N805858	Screws
3	—	Steering Wheel	45	390345-S36	Screws
4	—	Air Bag Module Retaining Nuts	46	2B623	Parking Brake Vacuum Release Switch
5	14A664	Air Bag Clockspring Contact Assy	47	N805865	Tilt Pivot Screws
6	3530	Upper Column Shroud	48	3D655	Spring — Steering Column Position Lock
6A	3D677	Seal Assy	49	3F723	Actuator Housing
7	3533	Lower Column Shroud	50	—	Ignition Switch
8	55929	Shroud Retaining Screws	51	N805858	Screws
9	11572	Ignition Lock Cylinder Assy	52	3F530	Pin — Pivot Lever
10	3F579	Retainer	53	3E691	Pawl Steering Column Lock Shifter
11	3E700	Bearing	54	3B663	Pin — Steering Column Lock Shifter
12	3E717	Gear — Steering Lock	55	3B632	Lower Column Bracket
13	13318	Turn Signal Cancelling Cam	56	7D282	Trans Control Selector Lower Lever
14	3C610	Snap Ring	57	805858	Screws
15	3520	Spring — Upper Bearing	58	3E738	Lower Bearing Housing Retainer
16	3518	Sleeve	59	N801555	Lower Column Mounting Nuts
16A	3L539	Ring	60	14A206	Bracket
17	3517	Bearing — Upper (Small)	61	N804409	Screw
18	3F642	Lock Cylinder Housing	62	805859	Lower Bearing Housing Retaining Screws
19	13K359	Multi — Function Switch	63	3A649	Lower Column Bearing Sleeve
20	390345-S36	Screws	64	3517	Lower Column Bearing
21	—	Spring	65	3L539	Tolerance Ring — Lower
22	3F527	Tilt Release Lever	66	3C131	Sensor Ring
23	3D544	Tilt Actuator Lever	67	3C674	Spring
24	3F530	Tilt Actuator Lever Pin	68	N803942	Bolt — Flange Yoke
25	3E695	Cam Steering Column Lock	69	3N725	Steering Shaft U — Joint Assy
26	14A163	Clip Wiring — Upper	70	N803942	Bolt
27	3D657	Steering Shaft Assy	71	7E364	Shift Cable Bracket
28	3C732	Spring Lock Lever	72	805858	Shift Cable Bracket Mounting Screws
29	3B662 (RH) 3D653 (LH)	Lever Steering Column Lock	73	N806423-S56	Upper Column Mounting Nuts
30	3E723	Lock Actuator Assy — Upper	74	3E645	Absorber — Steering Column Impact
31	3E715	Lock Actuator Assy — Lower	75	N801555	Nuts
32	3E691	Pawl — Steering Column Lock (Shaft)	76	7E395	Shift Cable Assy
33	3E696	Spring — Steering Column Lock (Shaft)	77	3517	Bearing — Upper (Large)
34	7361	Plunger Trans Control Select	78	14A163	Clip Wiring — Lower
35	7B071	Spring — Trans Control Selector Return	79	7C464	Clip
36	7302	Shift Lever	80	2B654	Hose
37	7W441	Shift Lever Pin	81	N804326	Nut (2 Req'd)
38	7215	Trans Selector Control Tube	82	N620012	Nut (3 Req'd)
39	7E400	Trans Gear Shift Tube Clamps	83	3E735	Boot Assy
40	7335	Bushings	84	3C562	Intermediate Shaft
41	N805858	Screws	85	N806393-S100	Bolt
42	14A099	Shield			

(Continued)

TG5794D