


DISASSEMBLY AND ASSEMBLY (Continued)


(Continued) DISASSEMBLY AND ASSEMBLY

Item	Part Number	Description
1	7A216	Shift Control Selector Bracket
2	N805858	Screws (6 Req'd)
3	7212	Shift Control Assy
4	7L278	Bushings
5	3Z719	Brake Shift Interlock Solenoid
A		Tighten to 7-11 N·m (5-8 Lb·Ft)


12. Using a drift tap lock actuator cam pivot pin loose. Remove with diagonal pliers.

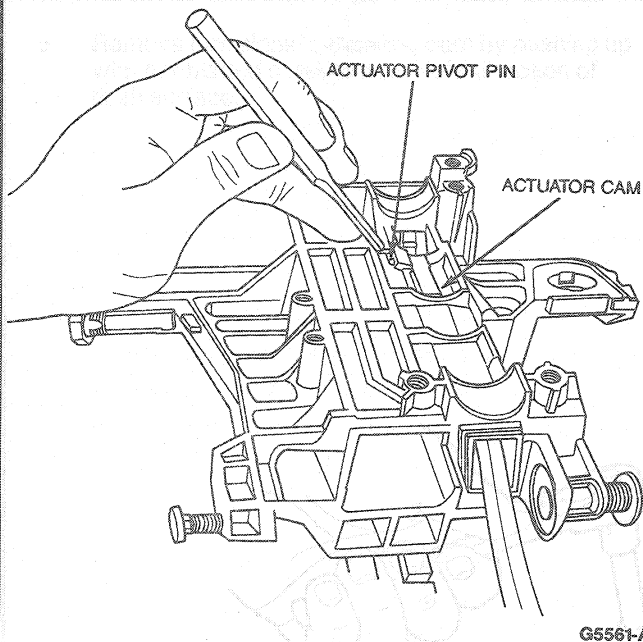

13. Remove plastic bearing retainer from lock cylinder bore.

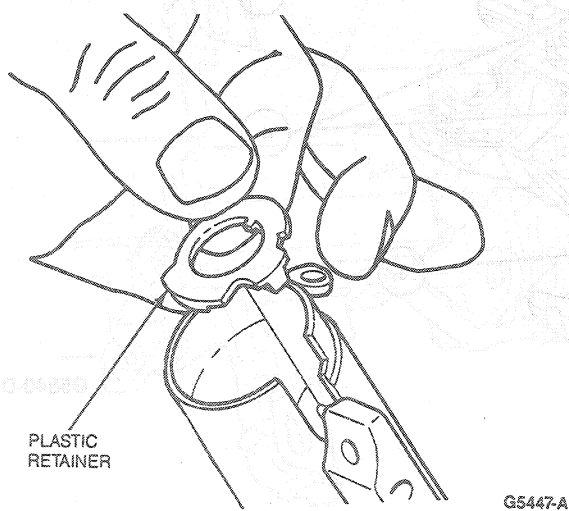


14. Remove metal bearing from lock cylinder bore.

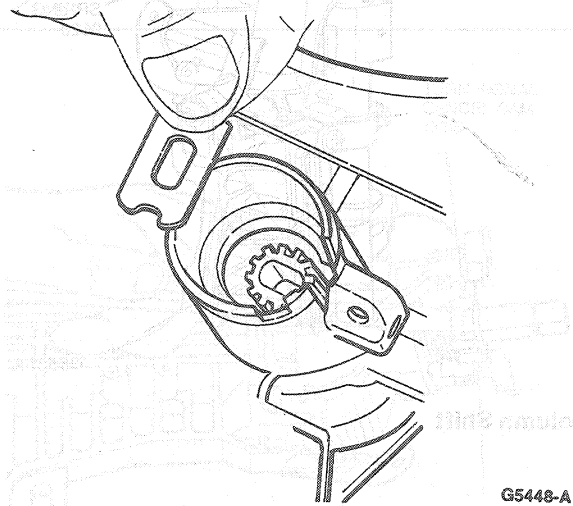

15. Remove ignition lock gear.

16. Remove two tilt pivot bolts. Use caution as tilt spring will release when bolts are removed. Remove lock cylinder housing.

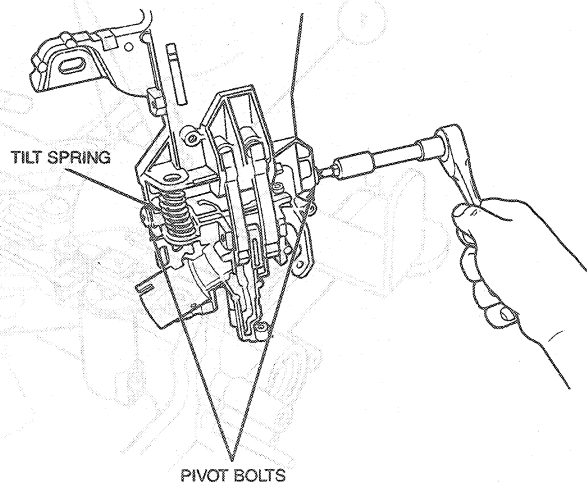

17. Remove steering shaft from column assembly.