

DISASSEMBLY AND ASSEMBLY (Continued)

- 14. Install ignition switch. Align pin from switch with slot in lock / column assembly. Position slot in lock / column assembly with index mark on casting. Tighten two retaining screws to 7-11 N·m (5-8 lb-ft).

