


REMOVAL AND INSTALLATION (Continued)

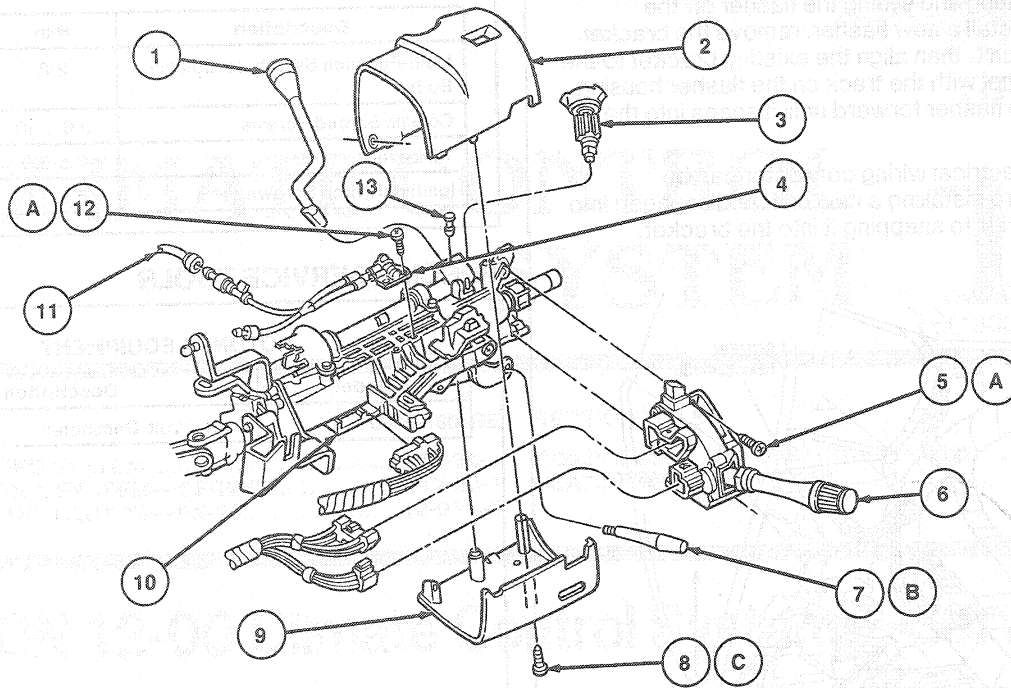

K13999-B

| Item | Part Number | Description |
|------|-------------|-------------------------|
| 1 | 7202 | Shift Lever Assy |
| 2 | 3530 | Upper Shroud |
| 3 | 11A606 | Ignition Lock Assy |
| 4 | 2B623 | Park Brake Release Assy |
| 5A | 390345-S36 | Screw (2 Req'd) |
| 6 | 13K359 | Switch Assy |
| 7B | 3F609 | Tilt Lever |
| 8C | 55929-S2 | Screw (4 Req'd) |
| 9 | 3533 | Lower Shroud |

| Item | Part Number | Description |
|------|-------------|--------------------------------------|
| 10 | 11572 | Ignition Switch |
| 11 | 2B653 | Hose |
| 12A | 390345-S36 | Screw (2 Req'd) |
| 13 | 7G357 | Pin |
| A | | Tighten to 2-3 N-m (17-26 Lb-in) |
| B | | Tighten to 3.5-5.0 N-m (30-44 Lb-in) |
| C | | Tighten to 0.6-1.13 N-m (6-10 Lb-in) |

(Continued)

Flasher Unit

Removal and Installation

The turn signal flasher is located on the LH side of the instrument panel, and is retained by one screw to the lower instrument panel reinforcement.