


REMOVAL AND INSTALLATION (Continued)

The combination turn signal and hazard flasher can be removed by tilting and sliding the flasher off the bracket. To install a new flasher, remove the bracket from the new unit, then align the existing bracket to the instrument panel with the track on the flasher housing. Then push the flasher forward until it snaps into the bracket.

NOTE: The electrical wiring connector can be removed before installing a new unit, and engaged into the new unit prior to snapping it into the bracket.

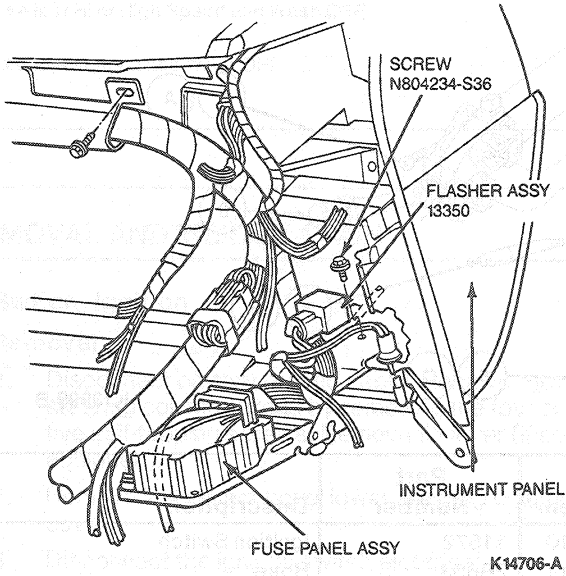

SPECIFICATIONS

TORQUE SPECIFICATIONS

Description	N·m	Lb·In
Multi-Function Switch -to-Column Bolts	2-3	17-26
Column Shroud Screws	0.6-1.13	6-10
Tilt Lever	3.5-5.0	30-44
Ignition Switch Screws	5.6-7.9	50-69

SPECIAL SERVICE TOOLS

ROTUNDA EQUIPMENT

Model	Description
007-00001	Digital Volt-Ohmmeter