

DIAGNOSIS AND TESTING (Continued)

ERROR CODE KEY

Error Code	Detected Condition	Troubleshooting/Repair Procedure
01	Replace Control Assembly	
02	Blend Door Problem	● Refer to Blend Door Actuator Diagnosis
03	In-Vehicle Temp Sensor Open or Short	● Refer to In-Vehicle Temp Sensor Diagnosis
04	Ambient Temp Sensor Open or Short	● Refer to Ambient Temp Sensor Diagnosis
05	Sunload Sensor Short	● Refer to Sunload Sensor Diagnosis
888	Testing Complete—No Test Failure (All Segments On)	● Refer to EATC System Functional Check

TL5077C

NOTE: The in-vehicle temperature must be greater than 10°C (50°F) for all error codes shown to be valid.

