

REMOVAL AND INSTALLATION (Continued)

Floor Air Distribution Duct

Front Heater

Removal and Installation

1. Remove two screws attaching duct to evaporator case assembly just below heat distribution duct.
2. Pull floor air distribution duct away from evaporator case.
3. To install, position duct to evaporator case. Ensure retainer at forward edge of duct is inserted over edge of opening in evaporator case. Install retaining screws.



Floor Heater System

Removal and Installation

1. Remove carpet.
2. Remove nut holding rear duct on tunnel.
3. Remove two screws attaching floor duct to evaporator case assembly.
4. Pull floor duct away from evaporator case assembly.
5. Pull floor duct away from evaporator case.
6. To install duct, reverse Removal procedure.

