


REMOVAL AND INSTALLATION (Continued)

Heater Hose Installation, 3.2L SHO with EATC

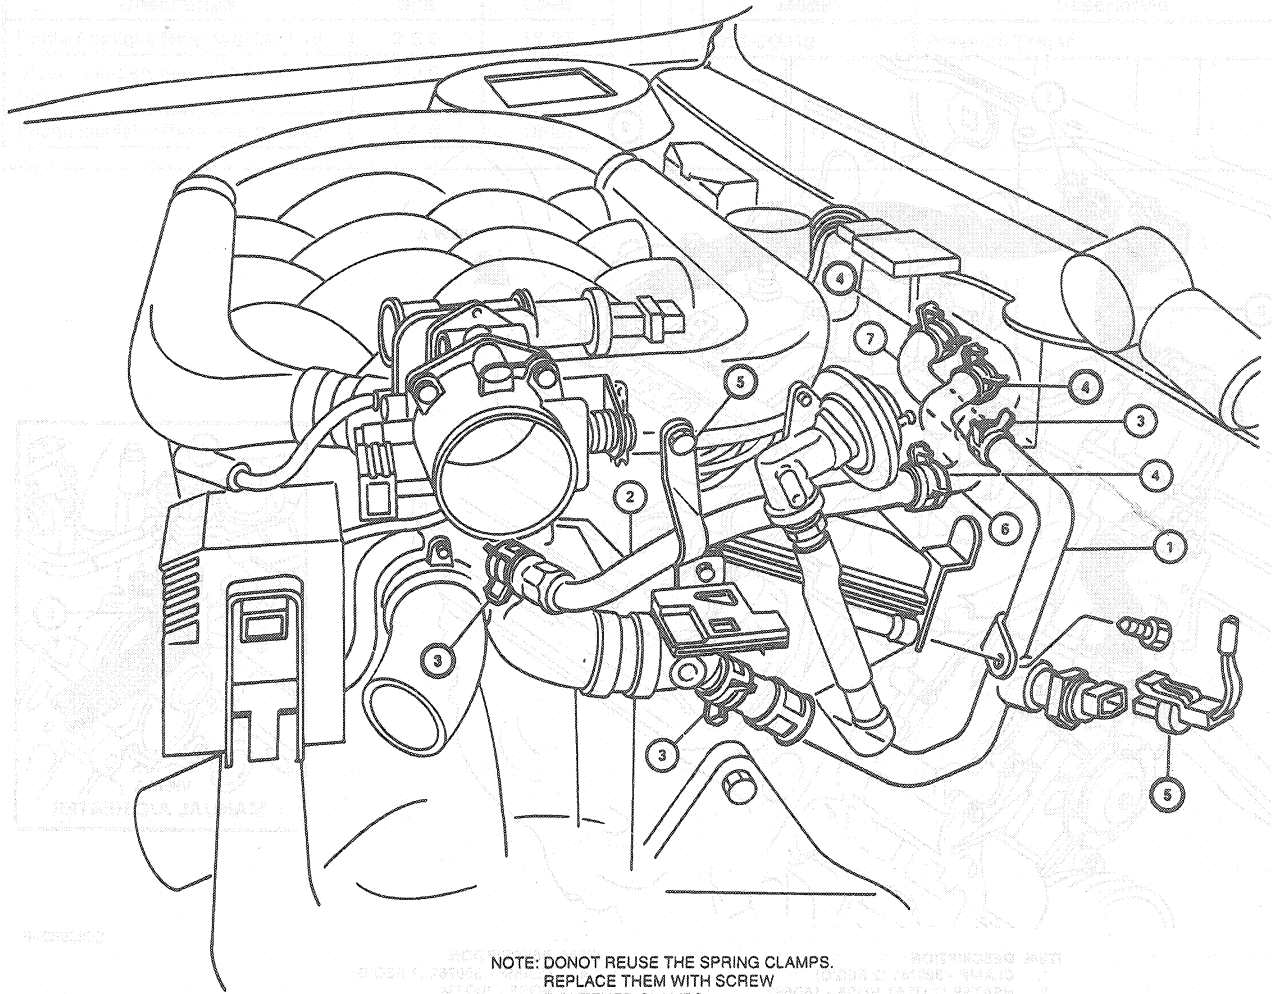

NOTE: DONOT REUSE THE SPRING CLAMPS.
REPLACE THEM WITH SCREW
TIGHTENED CLAMPS.

CCL 3544-B

ITEM DESCRIPTION

- 1. HEATER INLET HOSE - 18D376
- 2. HEATER OUTLET HOSE - 18D663
- 3. SPRING CLAMP
- 4. SPRING CLAMP
- 5. WIRING HARNESS - 14401 ASS'Y
- 6. HEATER OUTLET HOSE - 18D358
- 7. HEATER INLET HOSE - 18D335

Part No.	Description	Quantity
18D376	Heater Inlet Hose	1
18D663	Heater Outlet Hose	1
18D358	Heater Outlet Hose	1
18D335	Heater Inlet Hose	1