

SECTION 12-03A Air Conditioning System

SUBJECT	PAGE	SUBJECT	PAGE
ADJUSTMENTS		REMOVAL AND INSTALLATION (Cont'd.)	
Adding Refrigerant Oil	12-03A-73	Control Assembly, Automatic.....	12-03A-24
DESCRIPTION AND OPERATION		Control Assembly, Manual	
A/C-Heater System	12-03A-14	A/C—Heater	12-03A-25
Blend Door Actuator, Electric	12-03A-7	Defroster Nozzle and Demister	
Blower Speed Controller	12-03A-6	Duct/Hoses	12-03A-52
Cold Engine Lock Out Switch (CELO)	12-03A-7	Evaporator Case Assembly.....	12-03A-33
Components	12-03A-20	Evaporator Core.....	12-03A-37
Constant Control Relay Module (CCRM)	12-03A-11	Fixed Orifice Tube	12-03A-60
Control Assembly	12-03A-4	Floor Air Distribution Duct	12-03A-54
Control Operation.....	12-03A-15	Heater Core.....	12-03A-43
Input Sensors	12-03A-5	Heater Hoses.....	12-03A-66
Normal System Operation (Automatic)	12-03A-9	In-Vehicle Sensor Assembly.....	12-03A-26
Pressure Relief Valve	12-03A-9	Instrument Panel	12-03A-30
Refrigerant System	12-03A-22	Louver Assemblies, Manual	12-03A-30
System Airflow	12-03A-16	Outside-Recirc Door Vacuum Motor	12-03A-48
System Description	12-03A-10	Panel/Defrost Door Vacuum Motor	12-03A-58
Temperature Control	12-03A-16	Panel/Floor Door Vacuum Motor	12-03A-57
DIAGNOSIS AND TESTING		12-03A-22	12-03A-46
REMOVAL AND INSTALLATION		Refrigerant 134a (R-134a) Systems	12-03A-23
A/C Plenum Chamber	12-03A-49	Refrigerant Lines.....	12-03A-63
Air Inlet Duct and Blower Housing		Register Assemblies LH, Center Taurus.....	12-03A-48
Assembly	12-03A-56	Register Assemblies—LH, Center	
Ambient Sensor Assembly, Automatic.....	12-03A-26	Sable	12-03A-49
Blend Door Actuator	12-03A-31	Register Assemblies—RH	
Blower Motor and Wheel Assembly	12-03A-46	Taurus/Sable.....	12-03A-49
Blower Motor Resistor, Manual.....	12-03A-47	Register Ducts.....	12-03A-53
Blower Motor Speed Controller, EATC.....	12-03A-27	Spring Lock Coupling	12-03A-62
Blower Switch, Manual.....	12-03A-30	Suction Accumulator/Drier	12-03A-58
Clutch Cycling Pressure Switch	12-03A-60	Sunload Sensor Assembly	12-03A-26
Cold Engine Lock Out Switch (CELO)	12-03A-30	Vacuum Selector Switch, Manual	12-03A-30
Compressor	12-03A-68	SPECIAL SERVICE TOOLS	
Condenser	12-03A-62	SPECIFICATIONS	
Control Assembly Blower Knob, Manual		VEHICLE APPLICATION	
A/C	12-03A-23		

VEHICLE APPLICATION

Taurus/Sable.

DESCRIPTION AND OPERATION

This section covers all Taurus/Sable vehicles.

Taurus/Sable vehicles with 3.0L engines offer two types of A/C systems. The main difference between these systems involve the mandatory requirement of the use of different refrigerants. The two types of A/C systems are:

1. Fixed orifice tube type system with cycling clutch using the chlorofluorocarbon (CFC) based Refrigerant 12 (R-12).

2. Fixed orifice tube type system with cycling clutch using the non-chlorofluorocarbon (Non-CFC) based Refrigerant 134a (R-134a).

The electronic automatic temperature control (EATC) system is available as an option on Taurus/Sable vehicles. This system is graphically represented in a block diagram.

TOPICAL SPECIFICATIONS

Description	12	134a
Blower Motor Clutch	12-03A-46	12-03A-46
Upper Panel Retaining Screws	12-03A-30	12-03A-30
Lower Instrument Panel to Side	12-03A-30	12-03A-30
Clutch Cycling Screws	12-03A-60	12-03A-60
Instrument Cluster to Upper Panel	12-03A-30	12-03A-30
Retaining Screws	12-03A-30	12-03A-30

(Continued)