

REMOVAL AND INSTALLATION (Continued)


REMOVAL AND INSTALLATION (Continued)

Control Assembly, Manual A/C—Heater**Removal**


1. Disconnect battery ground cable.

Control Assembly Removal

2. Remove the instrument panel finish applique.
3. Remove four screws attaching control assembly to instrument panel.

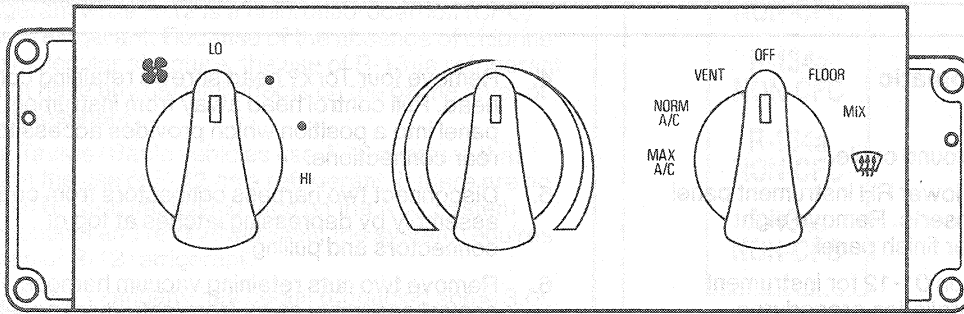

FRONT VIEW

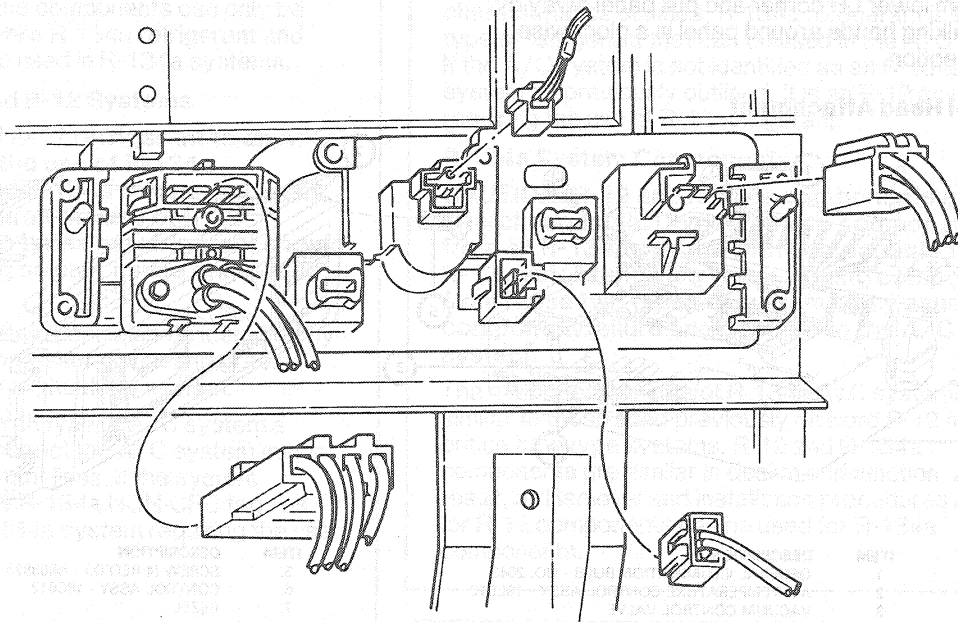

REAR VIEW

CCL 3546-D

4. Remove four Torx® head screws retaining control head. Pull control head away from instrument panel into a position which provides access to rear connectors.
5. Disconnect two harness connectors from control assembly by depressing latches at top of connectors and pulling.

Installation

CAUTION: Push on the vacuum harness retaining nuts. Do not attempt to screw them onto the post.

1. Connect wire connectors and vacuum harness to control assembly using new pushnuts.
2. Position control assembly to instrument panel opening and install four retaining screws.