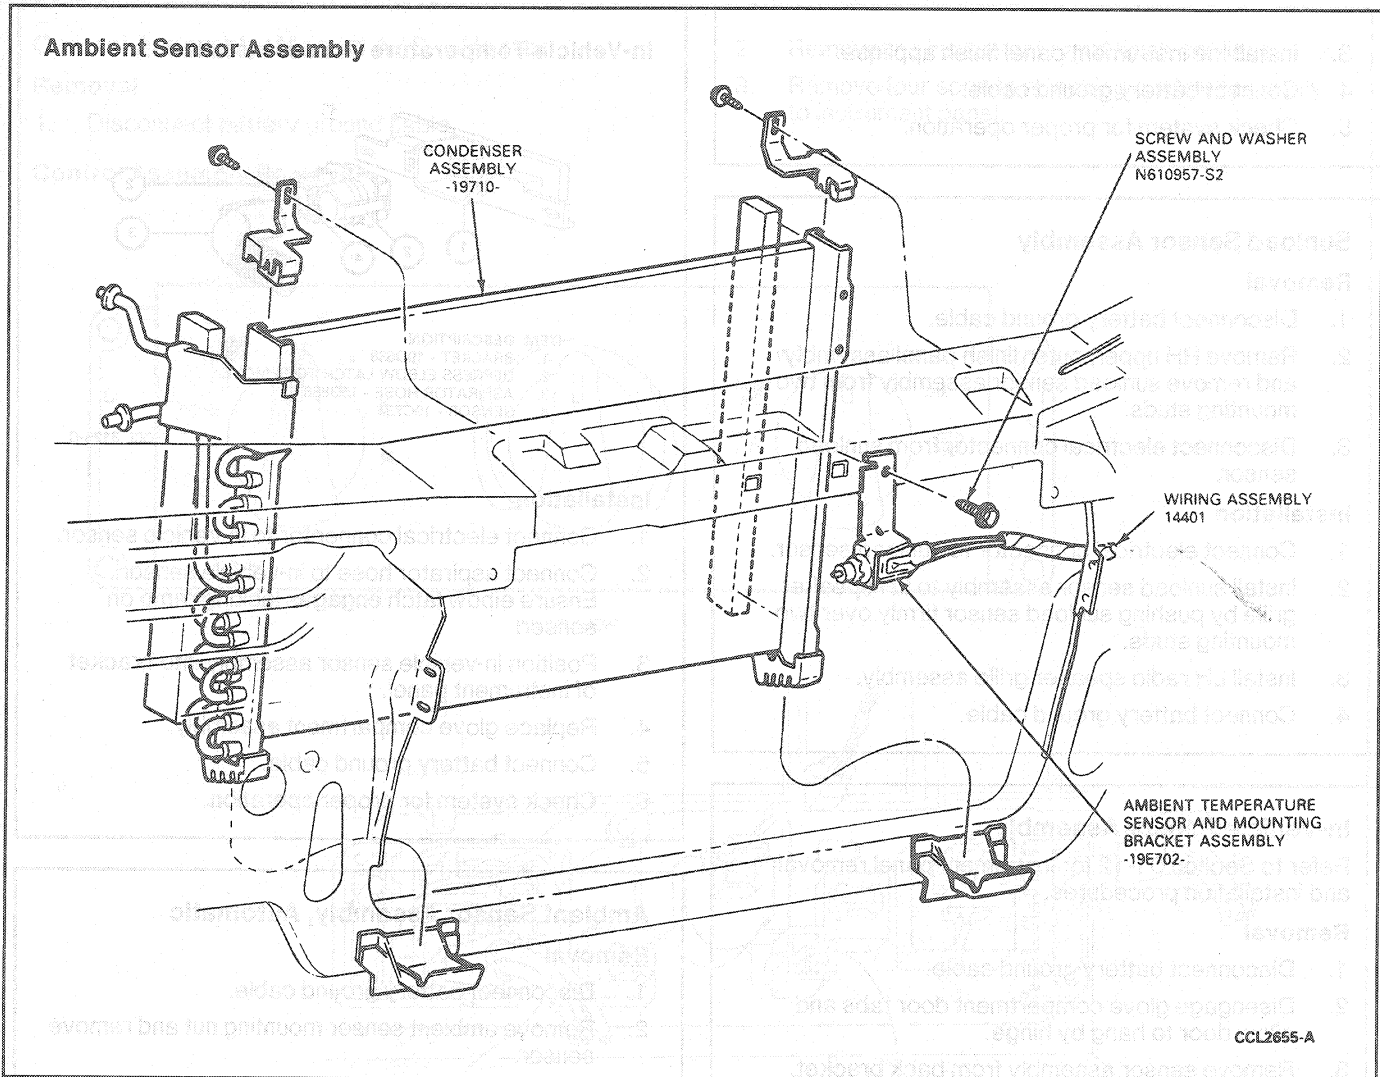


REMOVAL AND INSTALLATION (Continued)

**Installation**

1. Connect electrical connector to ambient sensor.
2. Position ambient sensor and install retaining nut. Tighten to 6.2-7.3 N·m (55-64 lb-in).
3. Connect battery ground cable.
4. Check system for proper operation.

2. Working through glove compartment opening, disconnect electrical snap-lock connector and aspirator hose at blower motor controller. Also, disconnect snap-lock connector from its mounting bracket.

Blower Motor Speed Controller, EATC**Removal**

1. Disengage glove compartment door tabs and allow door to hang by hinge.
2. Disconnect electrical connectors from blower motor controller by pulling out latches at top of connectors and pulling.